

125 mm

285 mm



2.0 CHANNEL SOUNDBAR



 
FOR TECHNICAL ASSISTANCE & TROUBLESHOOTING
PLEASE CALL 1-855-994-3832 OR VISIT WWW.SIBRANDS.COM

CONNECTIONS (REAR PANEL)



1. 3.5mm Stereo Aux Input
2. Optical Digital Input
3. AC Adapter Input


BUTTONS (SIDE PANEL)

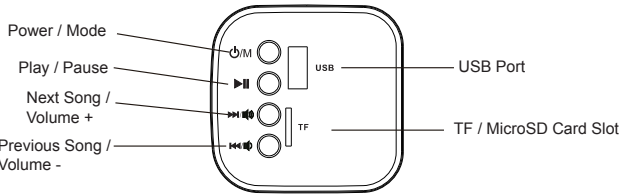

- ⏻/M : Press & Hold for power on/off. Press and release to change input mode.
- ▶▶ : Press and release to play or pause music in Bluetooth, USB, or TF/MicroSD modes.
- ⏮/⏭ : Press & Hold for volume +. Press and release to change to next song.
- ⏮/⏭ : Press & Hold for volume -. Press and release to change to previous song.
- USB : USB Port supports MP3, WMA, and WAV audio files. Supports USB drives up to 32GB.
- TF : TF/MicroSD Card Slot supports MP3, WMA, and WAV audio files. Supports cards up to 32GB.

1

 Remote Control

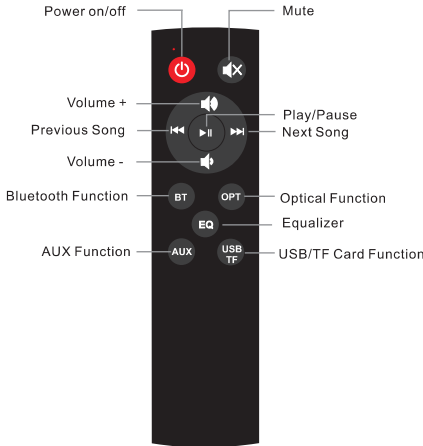

- ⏻ : Press to power on/off.
- ⏻ : Press to mute/un-mute sound.
- ▶▶ : Press to play or pause music (Bluetooth and USB/TF modes only).
- ⏮/⏭ : Press to skip to the next song (Bluetooth and USB/TF modes only).
- ⏮/⏭ : Press to skip to the previous song (Bluetooth and USB/TF modes only).
- EQ : Press to change equalizer settings (Flat, Classical, Rock, Pop, Jazz, and Live).
- BT : Press to enter Bluetooth Mode.
- OPT : Press to enter Optical Mode.
- AUX : Press to enter Aux Mode (3.5mm Stereo Aux Input).
- USB/TF : Press to enter USB or TF Card Mode (device must be connected to enter mode).

2

INPUT FUNCTIONS

BLUETOOTH

To listen to music from a Bluetooth enabled device, you must first pair the device to the soundbar using the following steps:

1. Press the "BT" button on the remote, or press the "MODE" button on the side panel repeatedly until the soundbar enters Bluetooth mode.
2. Make sure the device you wish to pair (ex: smartphone, tablet, etc.) is in Bluetooth pairing/search mode (refer to the owners manual of your device for how to enter Bluetooth pairing/search mode).
3. On your device, perform a Bluetooth "device discovery" to add the soundbar as a new device.
4. When the soundbar is discovered your device will show "ESB2229" in the device list. Tap/Select "ESB2229" to pair the soundbar to your device.
5. If you are asked to enter a password, please enter "0000".

Once pairing is successful, you can play music directly from your device through the soundbar. The music can be controlled either directly on your device, or by using the Play/Pause, Next/Previous buttons on the soundbar or on the remote.

AUX Input

1. Connect your external device (TV, DVD player, etc.) to the AUX Input using the supplied 3.5mm stereo audio cable.
2. Press the "AUX" button on the remote, or press the "MODE" button on the side panel repeatedly until the soundbar enters Aux mode.
3. Control the playback from your connected external device (TV, DVD player) using the remote control from your device.
4. Volume can be controlled using the Volume +/- buttons on the remote or side panel.

OPTICAL Input (Preferred connection for best audio quality)

1. Connect your external device (TV, DVD player, etc.) to the Optical Input using a standard optical digital audio cable (not included).
2. Press the "OPT" button on the remote, or press the "MODE" button on the side panel repeatedly until the soundbar enters Optical mode.
3. Control the playback from your connected external device (TV, DVD player) using the remote control from your device.
4. Volume can be controlled using the Volume +/- buttons on the remote or side panel.

Note: If the soundbar is On but there is no sound output while in Optical mode, you may need to activate the PCM output setting on your source device (ex: TV, DVD player, etc.). Refer to the instruction manual of your device for instructions on activating PCM output.

3

USB and TF/microSD Card Inputs

To listen to music from a USB flash drive or TF/microSD card, simply insert the USB drive, or card into the USB Port or TF/microSD card slot on the side panel. The soundbar will switch to the USB or TF card mode and immediately begin playing music from the drive/card.

- Supports MP3, WMA, and WAV audio files.
- Supports drives/cards up to 32GB.
- USB and TF card modes cannot be entered if there is no USB drive or TF/microSD card inserted in the soundbar.

LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized ETEC dealer.

Should you be missing any of the included accessories or other components (screws, pieces, etc.), please contact the Customer Support Center to secure a replacement. It is not necessary to bring the unit back to the store. When calling, please reference the parts list found in the Instruction Manual to help us accurately identify the missing parts and promptly provide replacements.

We will replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, have your original dated sales receipt.

To obtain warranty service or replacement within the ninety-day warranty period, please return the product with all parts and accessories along with your original dated store receipt to the original place of purchase and the unit will be exchanged at no charge. It is not necessary to contact the manufacturer for warranty replacement.

Our Customer Support Center is available Monday - Saturday (10:00AM to 7:00PM EST) for technical assistance or troubleshooting. To contact us, please call 1-855-994-3832 or visit www.sibrands.com

This warranty applies only under conditions of normal use. Our products are not intended for outdoor use.

There are no consumer serviceable parts contained in this product and any attempt by the owner to service or repair the unit will immediately void all warranty coverage.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product. Damage to any external media such as flash drives, memory cards, and/or other devices are not covered nor is the cost incurred in shipping the unit for warranty repair or exchange. Under no circumstances shall ETEC be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL ETEC BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

 
This warranty does not cover re-manufactured, refurbished, or repaired units, or any products sold 'As Is'.

This warranty is valid only to the original purchaser of the Product in the United States and Canada and grants specific legal rights.

4

WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To reduce the risk of electric shock, do not open the cabinet. No user serviceable parts are inside. Refer servicing to qualified personnel.
- Batteries should not be exposed to excessive heat such as direct sunlight, fire, or other heat sources.
- Caution: Do not expose this appliance to dripping or splashing liquids. Do not put objects filled with liquid, such as vases on or near the appliance.
- Caution: To turn this appliance off completely, the POWER cord must be unplugged from the wall outlet. The power cord must be easily accessible at all times.

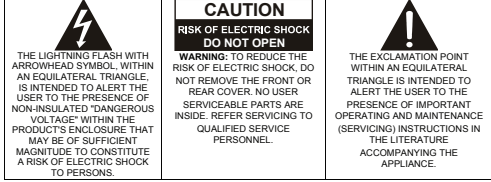

FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved in this manual could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and/or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the POWER cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as POWER-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



材质：128g铜版纸，单黑印刷，风琴折