


Metal Rods (Included)
Platinas Metalicas (Incluidas)

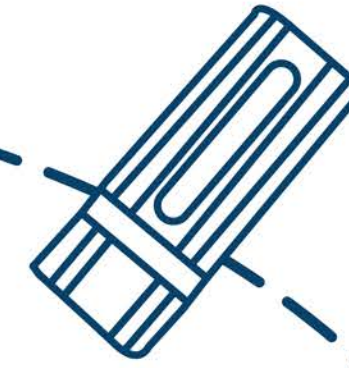

↑
REAR
PARTE TRASERA



←
LEFT
IZQUIERDA

LIQUID TEMPLATE

UNDERCOUNTER LAVATORY MODEL 279

Plantilla Lavamanos de Incrustar Liquid

→
RIGHT
DERECHA

Fine Fire Clay Lavatory Installation Guide

1. Remove template ring and these instructions from this cardboard enclosure. Discard outer remnants of cardboard enclosure.
2. Detach outer template ring from the inner circle containing these instructions. Place the template ring on the countertop in the desired location for the lavatory.
3. Draw four arrows lightly on the countertop, around the outside of the template ring, with each of the arrows you draw being pointed toward one of the printed arrows on the outer edge of the template ring. Do not move the template.
4. With the template ring still in the same position on the countertop draw around the inside of the ring. This is the guideline for the area to be cut out.
5. Cut opening in countertop, inside the guideline you have drawn.
6. Trim out lavatory with faucet and fittings and turn upside down.
7. Squeeze a continuous bead of sealant/adhesive all around the underside of the lavatory rim, about 1/4 inch from the edge. Use a knife, putty knife or piece of cardboard to spread the sealant/adhesive evenly out to the lavatory rim edge.
8. Using the lavatory faucet as a grip, lower the lavatory into the cut-out in the countertop. Center it between the four arrows you drew (in Step 3 above).
9. Press down evenly and firmly all around the rim to make a watertight seal. Use dampened finger to smooth off joint of seal all around rim. Clean up with water dampened sponge or cloth.

Guia De Instalación Para Lavamanos De Fine Fire Clay

1. Retire de la caja de cartón estas instrucciones y el anillo de la plantilla. Deseche los restos de la caja de cartón.
2. Separe el anillo que contiene estas instrucciones por el interior del círculo. Coloque la plantilla sobre el mesón en el lugar donde desea instalar el lavamanos.
3. Dibuje suavemente en el mesón cuatro flechas alrededor de la parte externa de la plantilla. Cada una de las flechas que dibuje deberán apuntar hacia una de las flechas impresas en el extremo exterior de la plantilla. No mueva la plantilla.
4. Con la plantilla en la misma posición sobre el mesón dibuje el interior del anillo. Esto le indicará el área que tiene que retirar.
5. Corte el mesón por la parte interna de la línea guía que usted ha dibujado.
6. Instale la grifería y los accesorios en el lavamanos y póngalo boca abajo.
7. Aplique a un 1/4 de pulgada aproximadamente del borde inferior del lavamanos un cordón continuo de pasta adhesiva. Use un cuchillo, una espátula o un trozo de cartón para extender por el borde del lavamanos de manera uniforme la pasta adhesiva.
8. Sujete el lavamanos por el grifo y bájelo sobre el espacio abierto en el mesón. Céntralo entre las cuatro flechas que dibujó (en el paso 3).
9. Presione de manera uniforme y firme por todo el diámetro del lavamanos para crear un sello impermeable. Use los dedos húmedos para suavizar la junta alrededor del borde. Limpie con una esponja o paño húmedo.

CUT COUNTERTOP INSIDE THIS RING
CORTE LA CIMA CONTRARIA DENTRO ESTE ANILLO

↓
FRONT
FRENTE

