


Backless Corner Nook

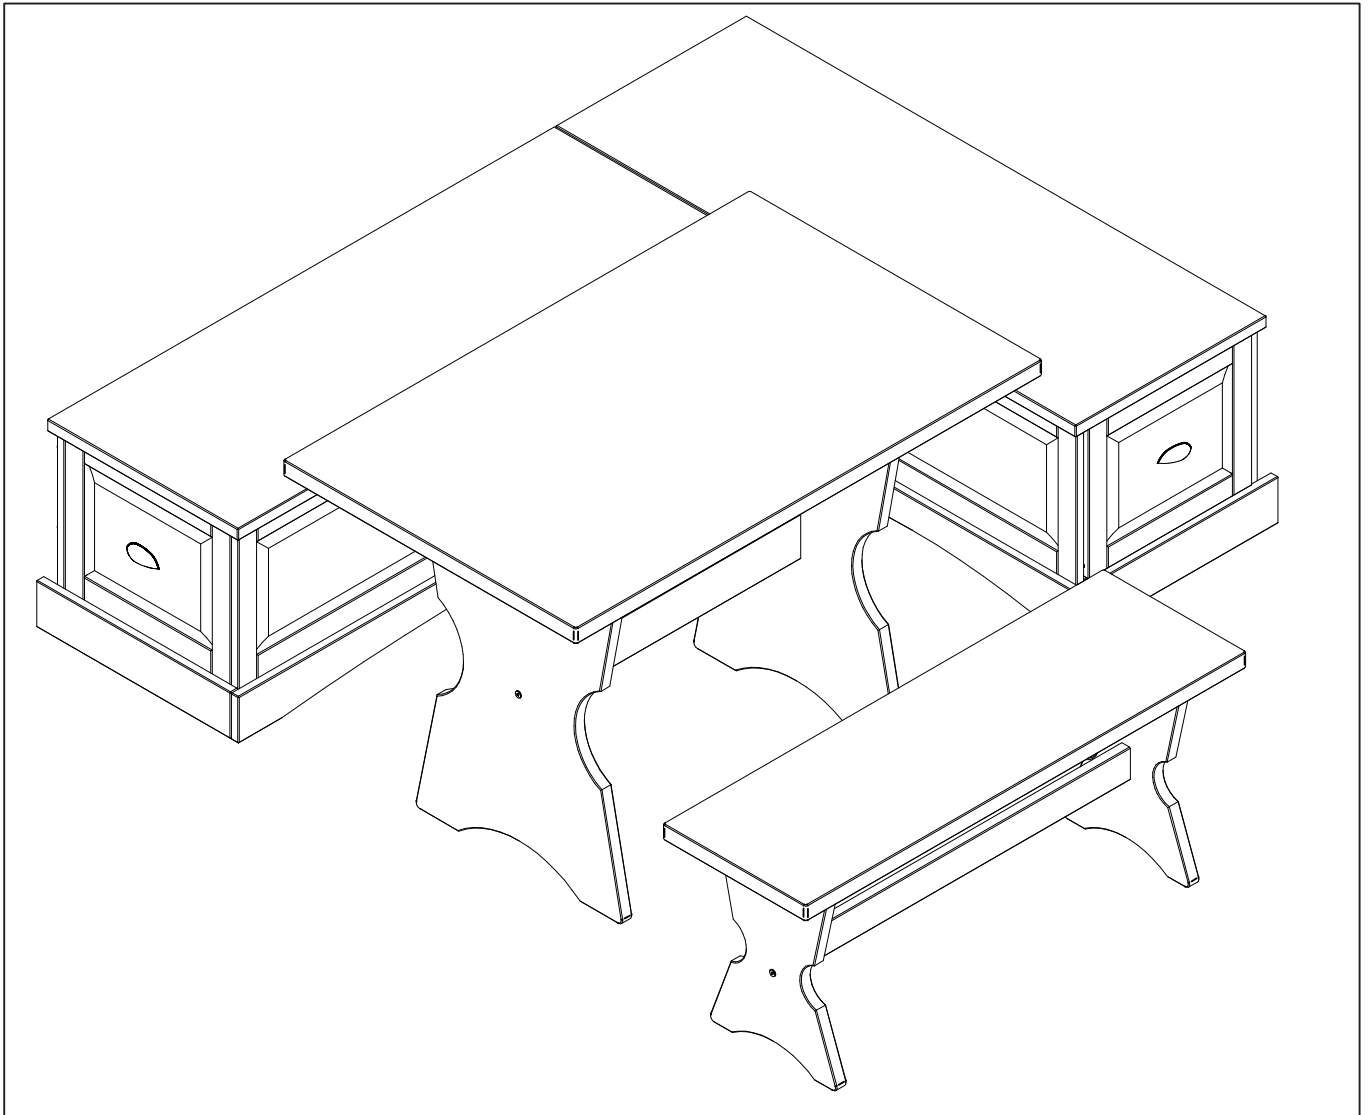

We are here to help! Before you return It - contact us.

We do our best to insure that your furniture arrives in excellent condition. In the event that a part is damaged or missing, Linon Home Decor will be happy to provide you with replacement parts, at no charge, within 30 days of purchase, providing the parts are available in our warehouse and the item purchased is part of our current inventory. In order to receive spare parts, at no charge, you must provide proof of purchase within 30 days.

If you need assistance with assembly or replacement parts, please call Linon Customer service, prior to returning the item to the store.









Our office is open Monday- Friday 9 AM-5PM, Eastern Standard Time.
Our toll free customer service number is: 1-800-262-1852.
Or visit our web site [w.w.w.Linon.com](http://www.Linon.com) to order spare parts and for care instructions on your newly purchased furniture.

IMPORTANT NOTE: Follow instructions listed below in the proper sequence as numbered to assure fast, easy and correct assembly.
Factory code: **BR7**

HARDWARE PACKAGE COUNT (CORNER BENCH)

OPEN HARDWARE PACKAGE ON A FLAT SURFACE COVERED WITH NEWSPAPER. COUNT EACH PIECE OF HARDWARE TO MATCH THE QUANTITY NUMBER IN THE HARDWARE IDENTIFICATION COLUMN. CALL CUSTOMER SERVICE IF ANY PARTS ARE MISSING. FOLLOW THE LETTER IDENTIFICATION WHEN READING THE ASSEMBLY DRAWING "A" THROUGH "Z".

HARDWARE IDENTIFICATION

A		WOODEN DOWEL 1 3/16" LONG 8 x 30mm	55
B		WOODEN DOWEL 8 x 20mm	12
C		SCREW 1 3/16" LONG 4,5 x 35mm	28
D		SCREW 1 3/16" LONG 4,5 x 30mm	46
E		SCREW 3,5 x 14mm	24
G		SCREW 7x50mm	10
H		UNION SCREW	08
I		STEM	04
J		ALLEN WRENCH	02
K		SAFETY HINGE	02
L		SCREW M4 x 17mm	04
M		RIGHT RUNNER	01
N		LEFT RUNNER	01
O		HINGE	03
P		HANDLE	02
Q		SCREW 3,5 x 14mm	12

IMPORTANT:

PLEASE USE ALL THE HARDWARE MENTIONED ABOVE.
THEY WILL ASSURE THE ITEM STABILITY AND SAFETY.


TOOLS REQUIRED

A STANDARD PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND AN ALLEN WRENCH (PROVIDED J).
USE A PLASTIC HEAD Mallet TO TAP IN WOODEN DOWELS. NOTE: A PIECE OF WOOD CAN ALSO BE USED TO KNOCK IN WOODEN DOWELS.

BEFORE YOU BEGIN ASSEMBLY, SELECT AN OPEN SPACE, PREFERABLY ON A CARPET AREA.
IF ASSEMBLING ON A HARD SURFACE, OR ON A WOOD FLOOR, USE A BLANKET
TO PREVENT SCRATCHING FURNITURE AS WELL AS WOOD FLOOR.

PARTS IDENTIFICATION

- | | |
|---------------------------------|------------------------------|
| 1 – LEFT SIDE PANEL | 13 – SIDE RAIL |
| 2 – LARGE FRONT PANEL | 14 – UNION RAIL |
| 3 – SMALL FRONT PANEL | 15 – STORAGE DIVISION (2X) |
| 4 – SMALL STORAGE BACK PANEL | 16 – LARGE BOTTOM PANEL |
| 5 – SMALL BACK PANEL | 17 – CLEAT (6X) |
| 6 – DIVISON | 19 – DRAWER FRONT PANEL |
| 7 – LARGE STORAGE BACK PANEL | 20 – DRAWER LEFT SIDE PANEL |
| 8 – OPEN SEAT | 21 – DRAWER BACK PANEL |
| 9 – FIXED SEAT | 22 – DRAWER RIGHT SIDE PANEL |
| 10 – SIDE SKIRTING BOARD (2X) | 23 – DRAWER BOTTOM PANEL |
| 11 – SMALL FRONT SKIRTING BOARD | 32 – STORAGE DIVIDER |
| 12 – LARGE FRONT SKIRTING BOARD | |

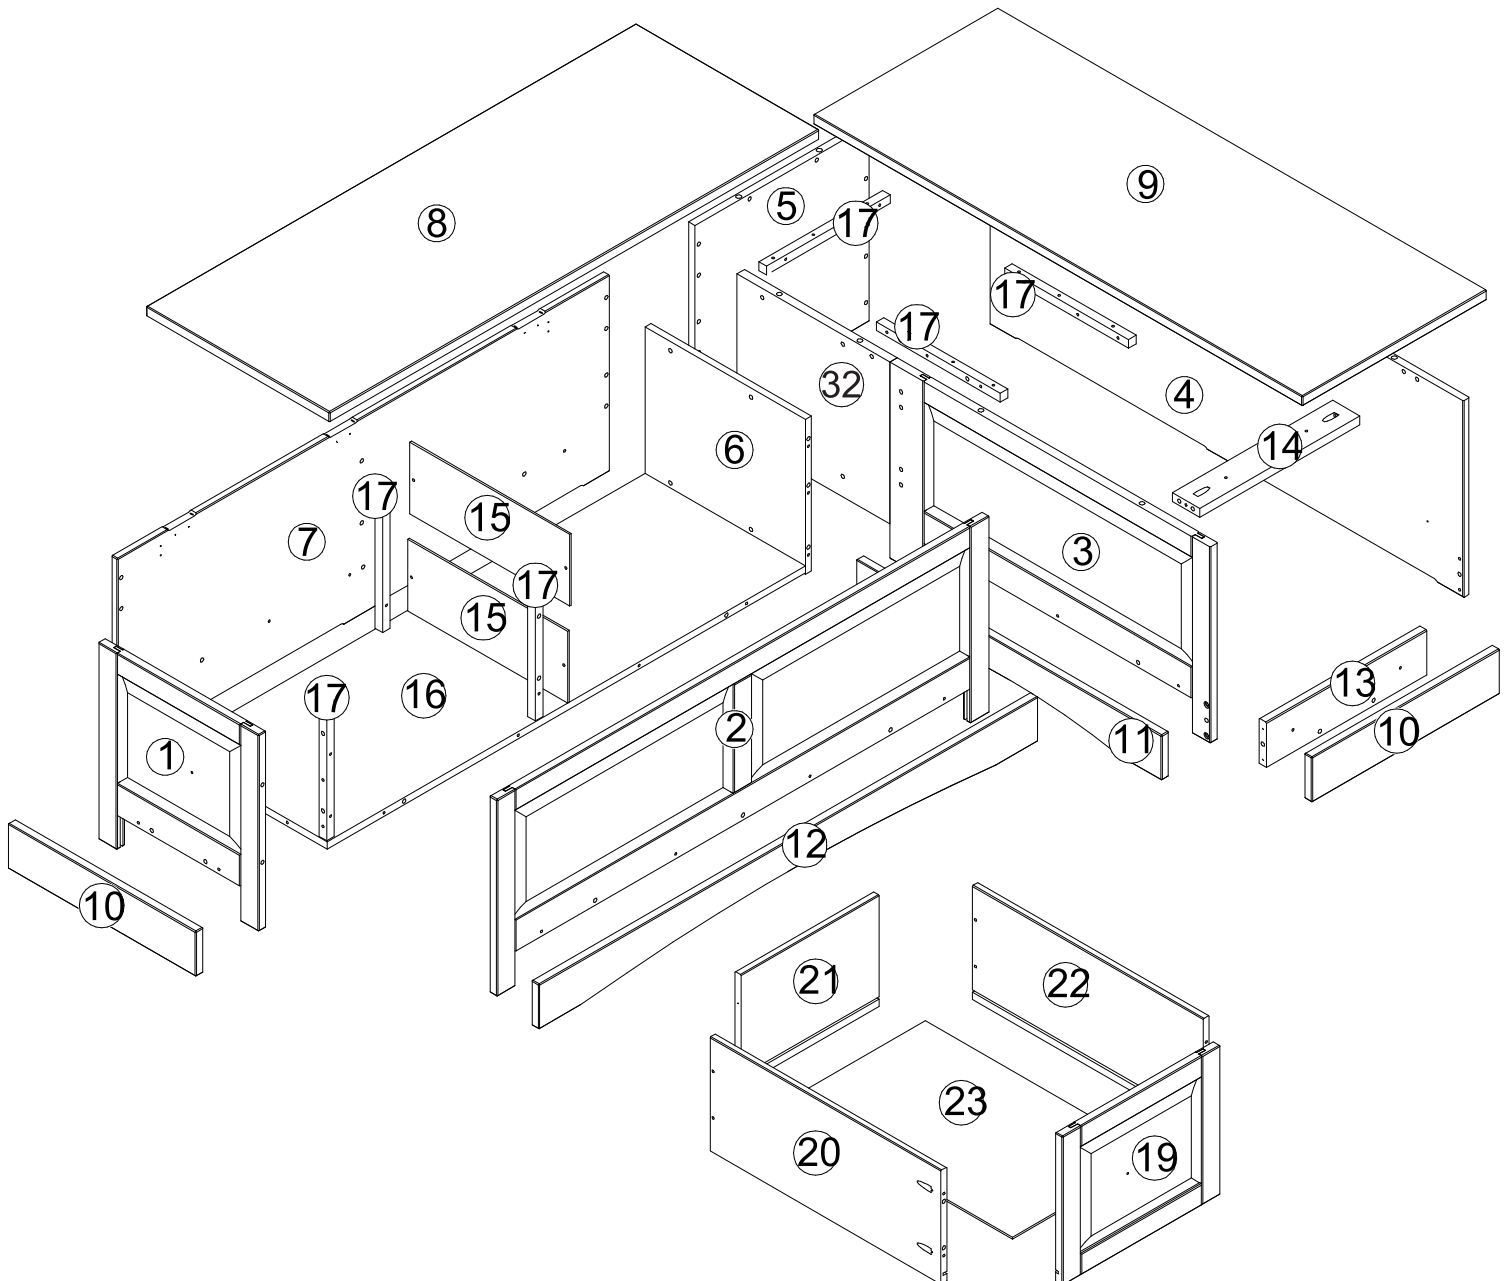

STEP 1)

1.1) INSERT (23) WOODEN DOWELS (A) IN THE FOLLOWING PIECES, AS PER DRAWING BELOW:

1 – LEFT SIDE PANEL

6 – DIVISON

10 – SIDE SKIRTING BOARD (2X)


11 – SMALL FRONT SKIRTING BOARD

12 – LARGE FRONT SKIRTING BOARD

13 – SIDE RAIL


14 – UNION RAIL

1.2) INSERT (12) WOODEN DOWELS (B) ON THE CLEATS # 17 (6X), AS PER DRAWING BELOW:

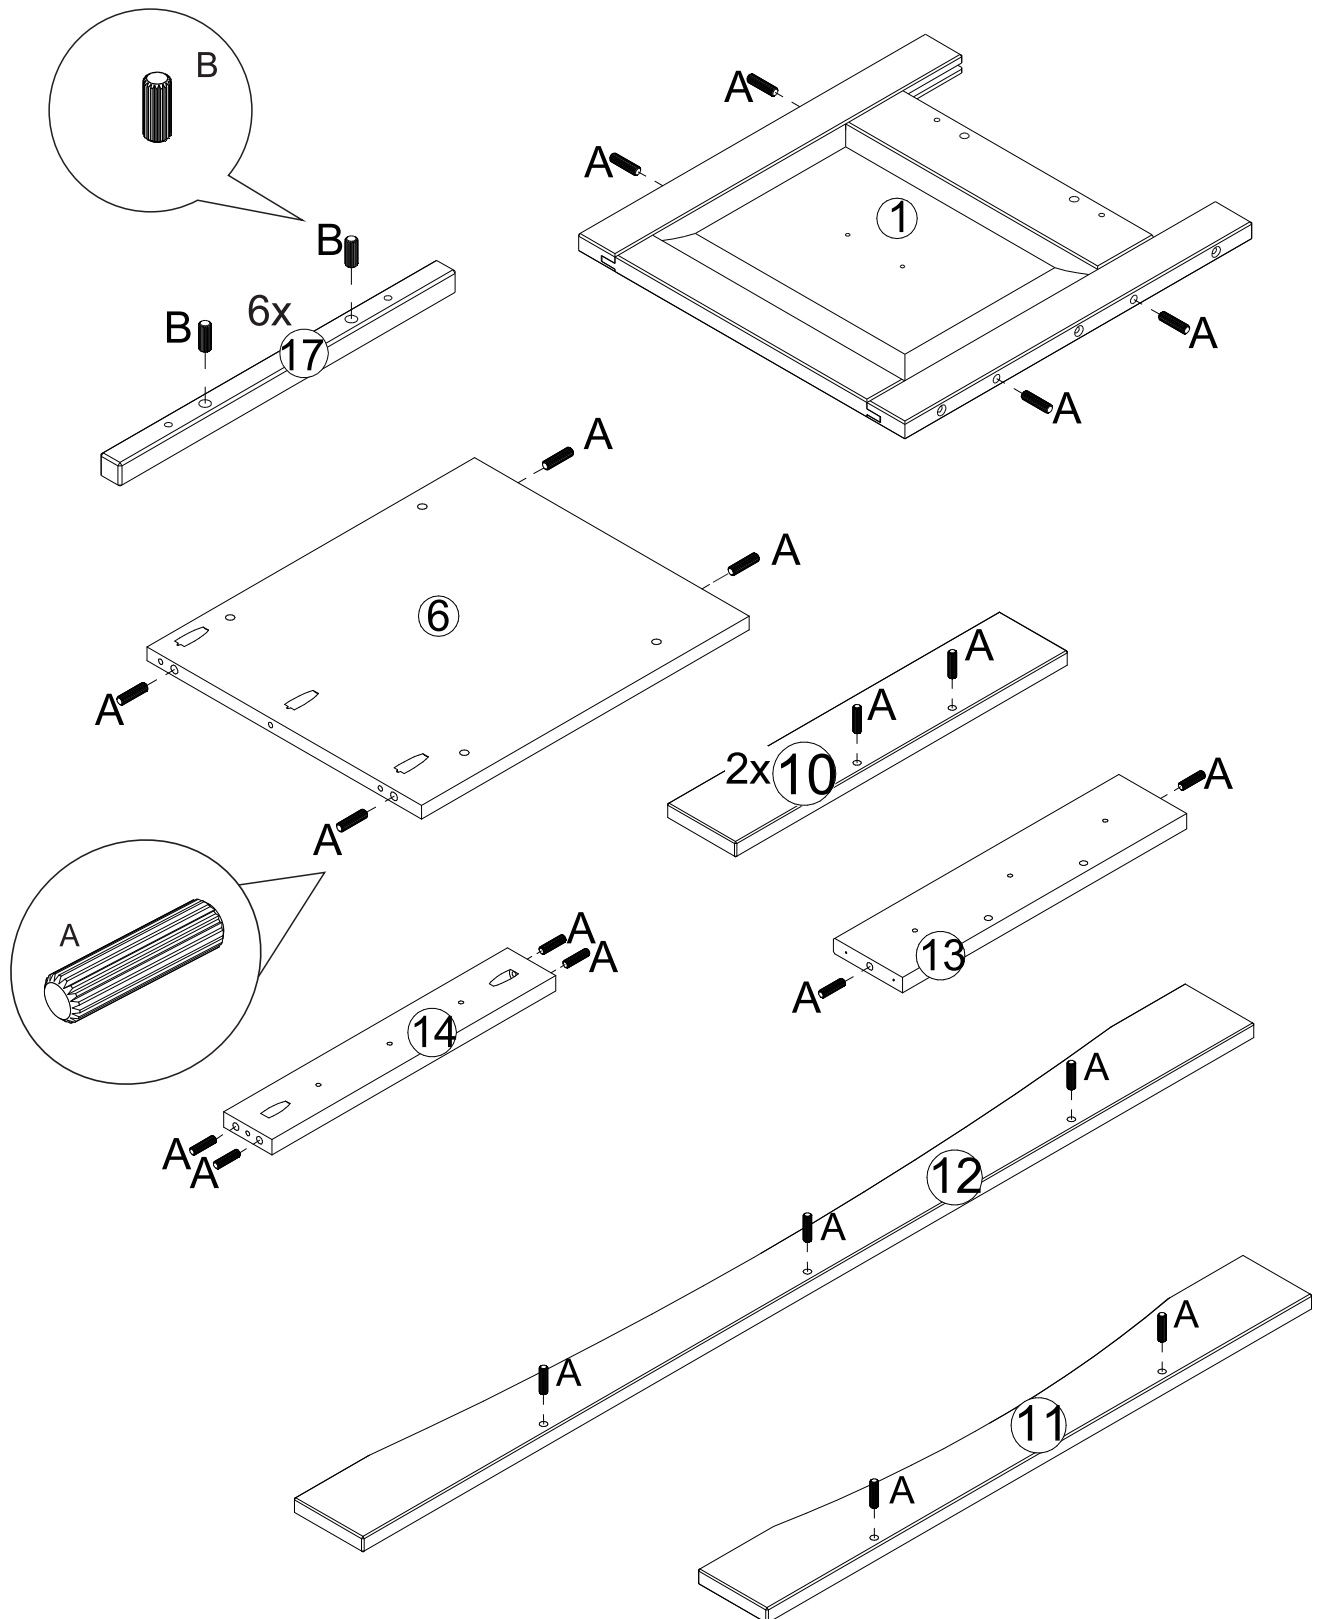

STEP 1)

1.3) INSERT (12) WOODEN DOWELS (A) TO LARGE BOTTOM PANEL # 16 AND LARGE FRONT PANEL # 02, AS PER DRAWING BELOW:

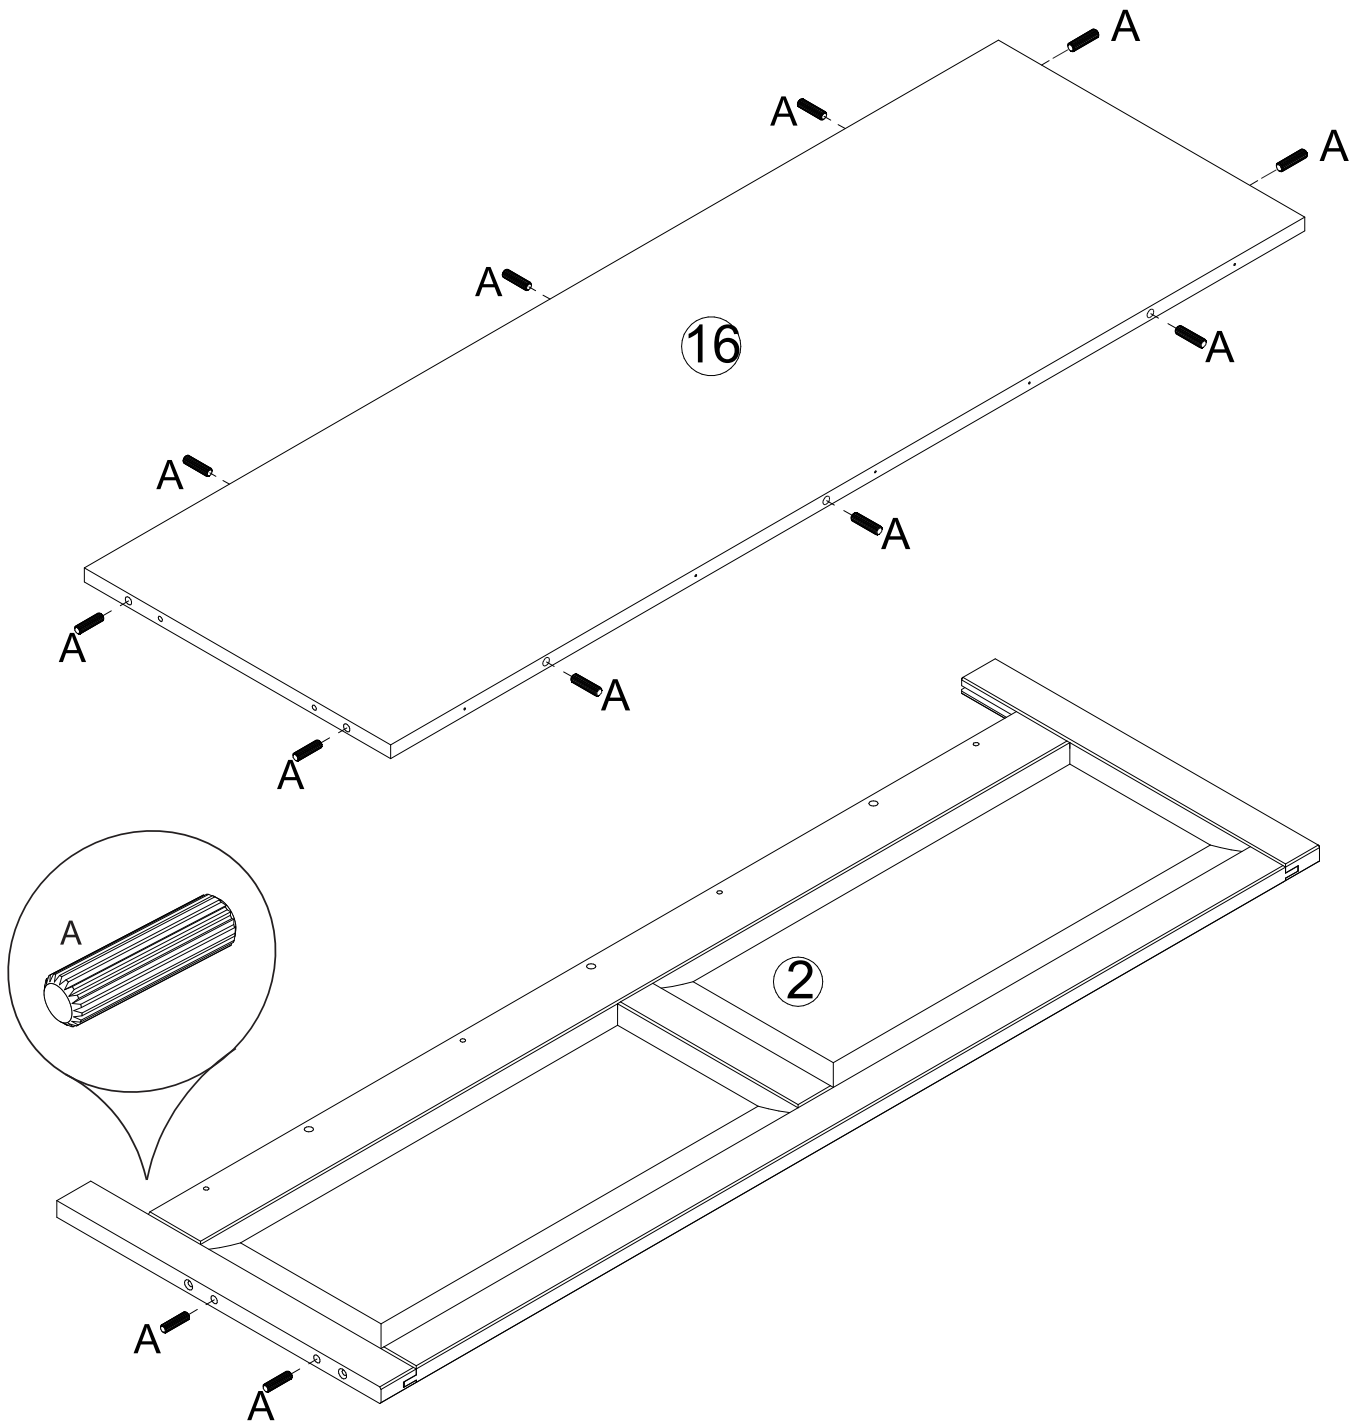

STEP 1)


1.4) CONTINUE INSERTING (16) WOODEN DOWELS (A) TO THE FOLLOWING PIECES:

3 - SMALL FRONT PANEL

4 - SMALL STORGE BACK PANEL


5 - SMAL BACK PANEL

32 - STORGE DIVISON

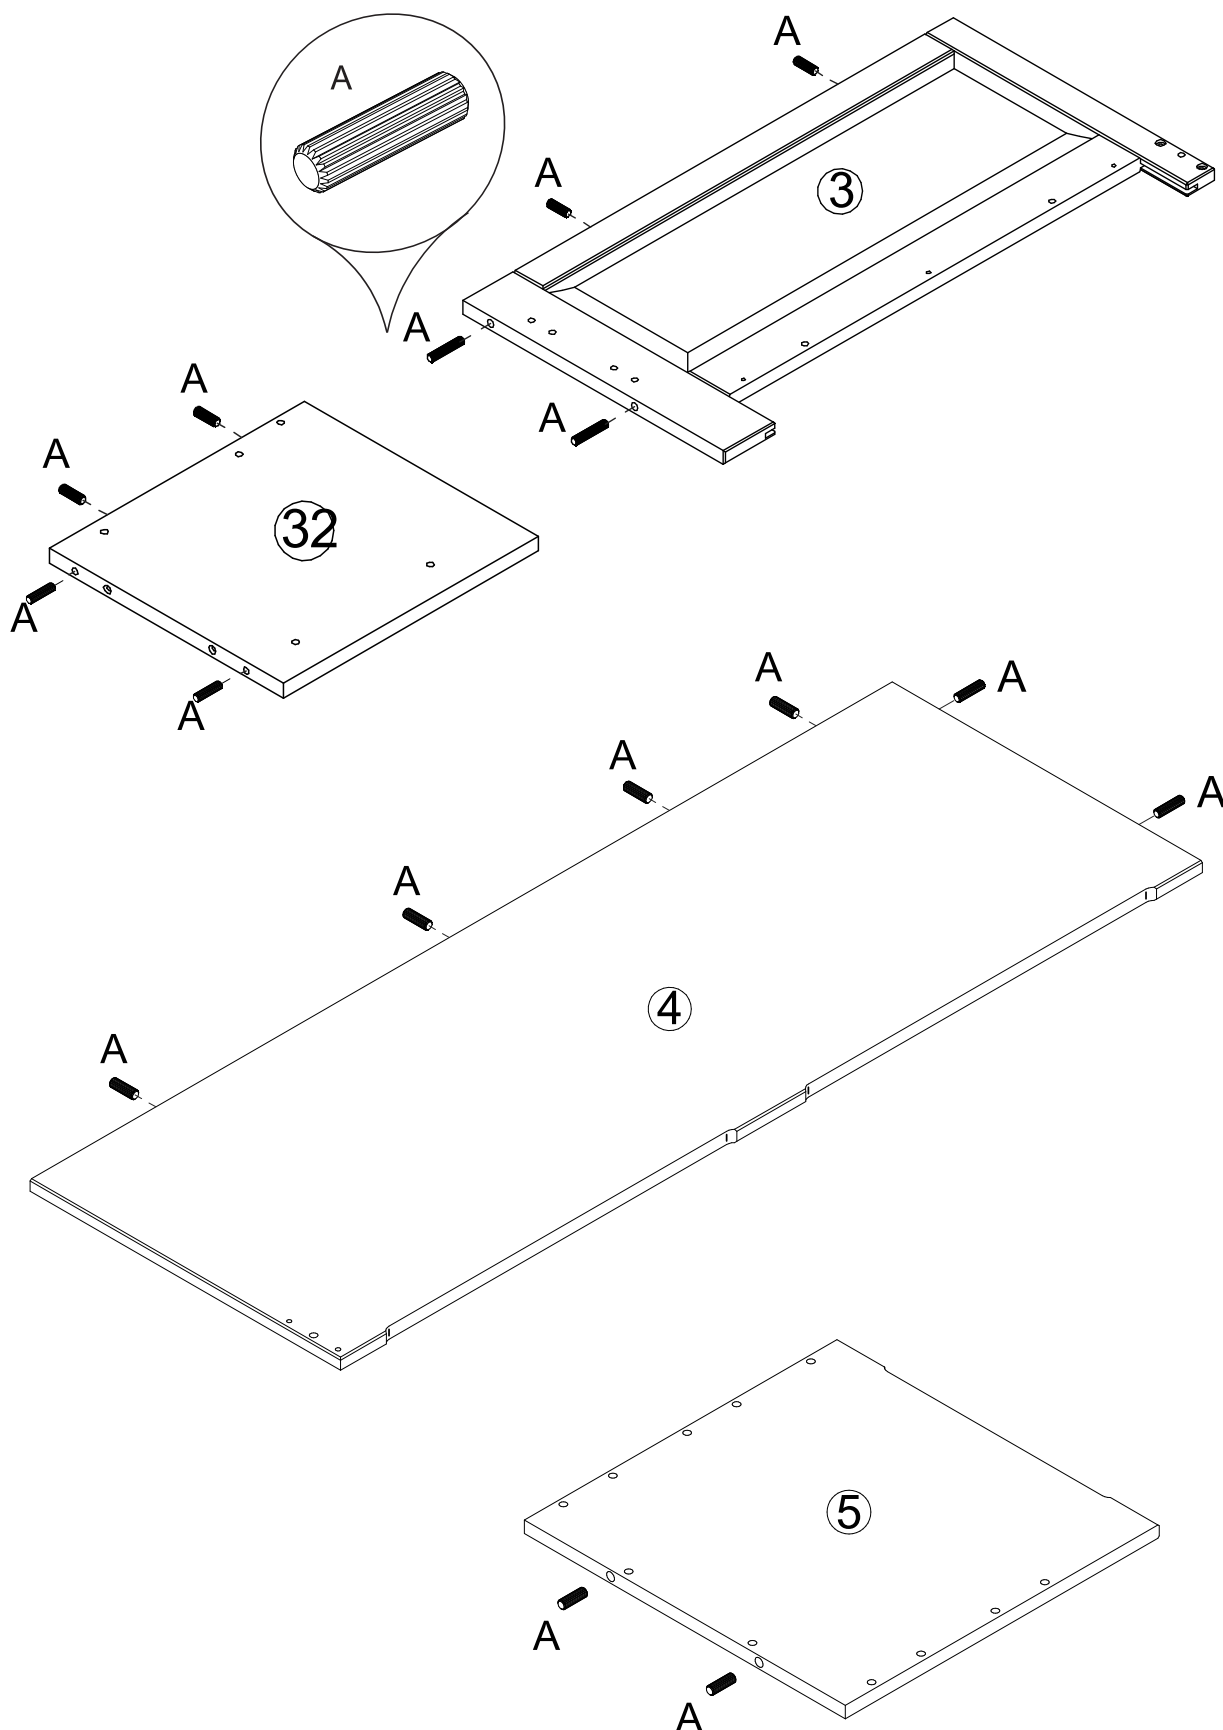


STEP 1)

1.5) FIX (03) HINGES (O) TO OPEN SEAT #08, USING (06) SCREWS (E), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE.

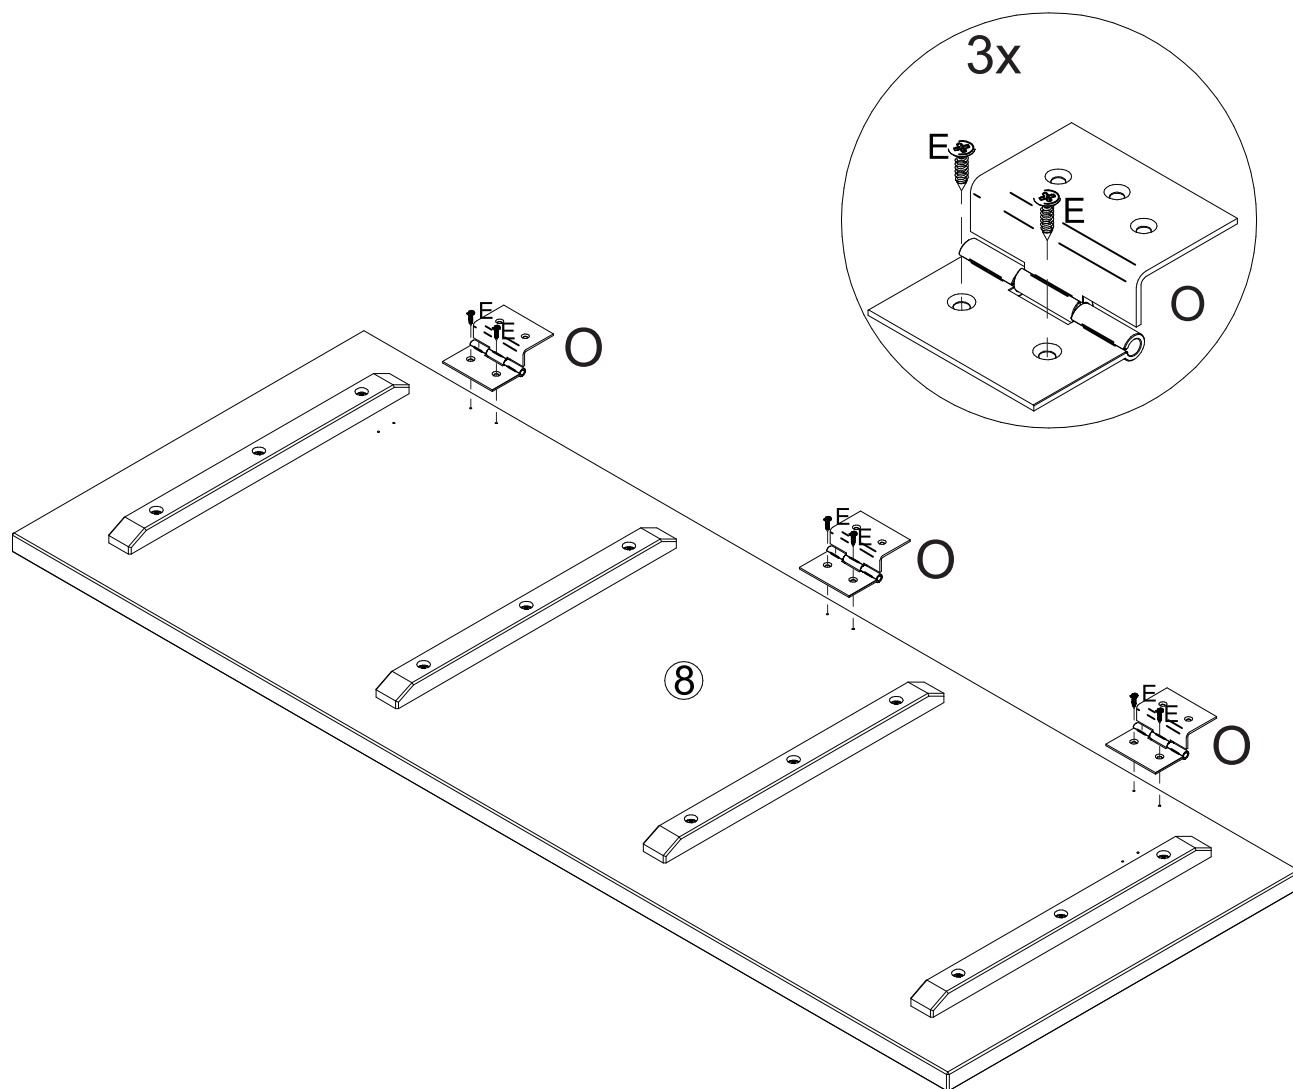


STEP 2)

2.1) JOIN SMALL FRONT PANEL #03 TO STORAGE DIVIDER #32, USING THE WOODEN DOWELS ALREADY INSERTED, AS GUIDE.

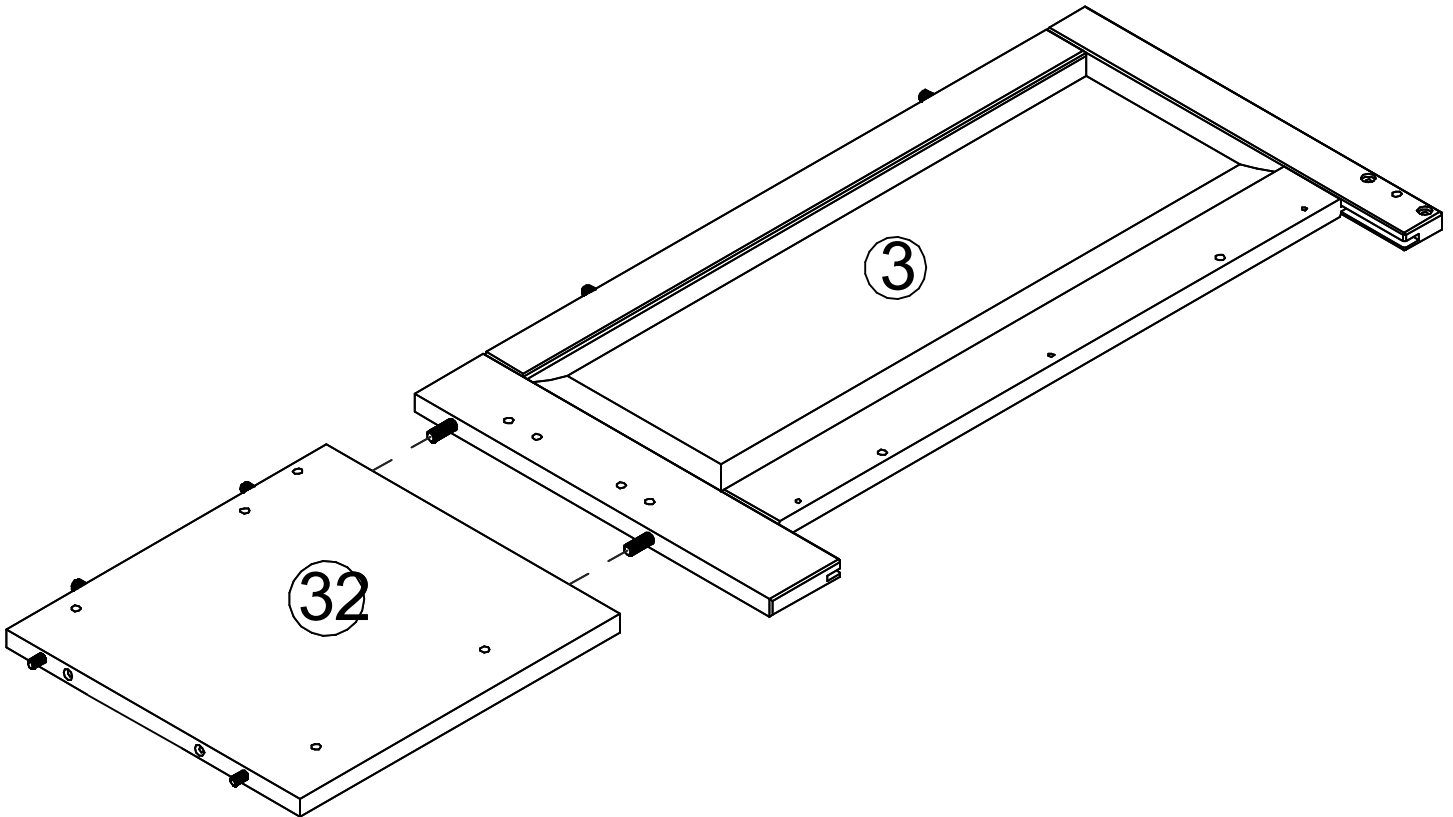

STEP 3)

3.1) FIX CLEATS # 17 (6X) TO LEFT SIDE PANEL # 1, LARGE FRONT PANEL #02, SMALL FRONT PANEL #3 ALREADY JOINTED WITH PIECE #32 , SMALL STORAGE BACK PANEL #4, SMALL BACK PANEL # 5, AND LARGE STORAGE BACK PANEL #07 USING (18) SCREWS (D), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE, AS SHOWN BELOW.

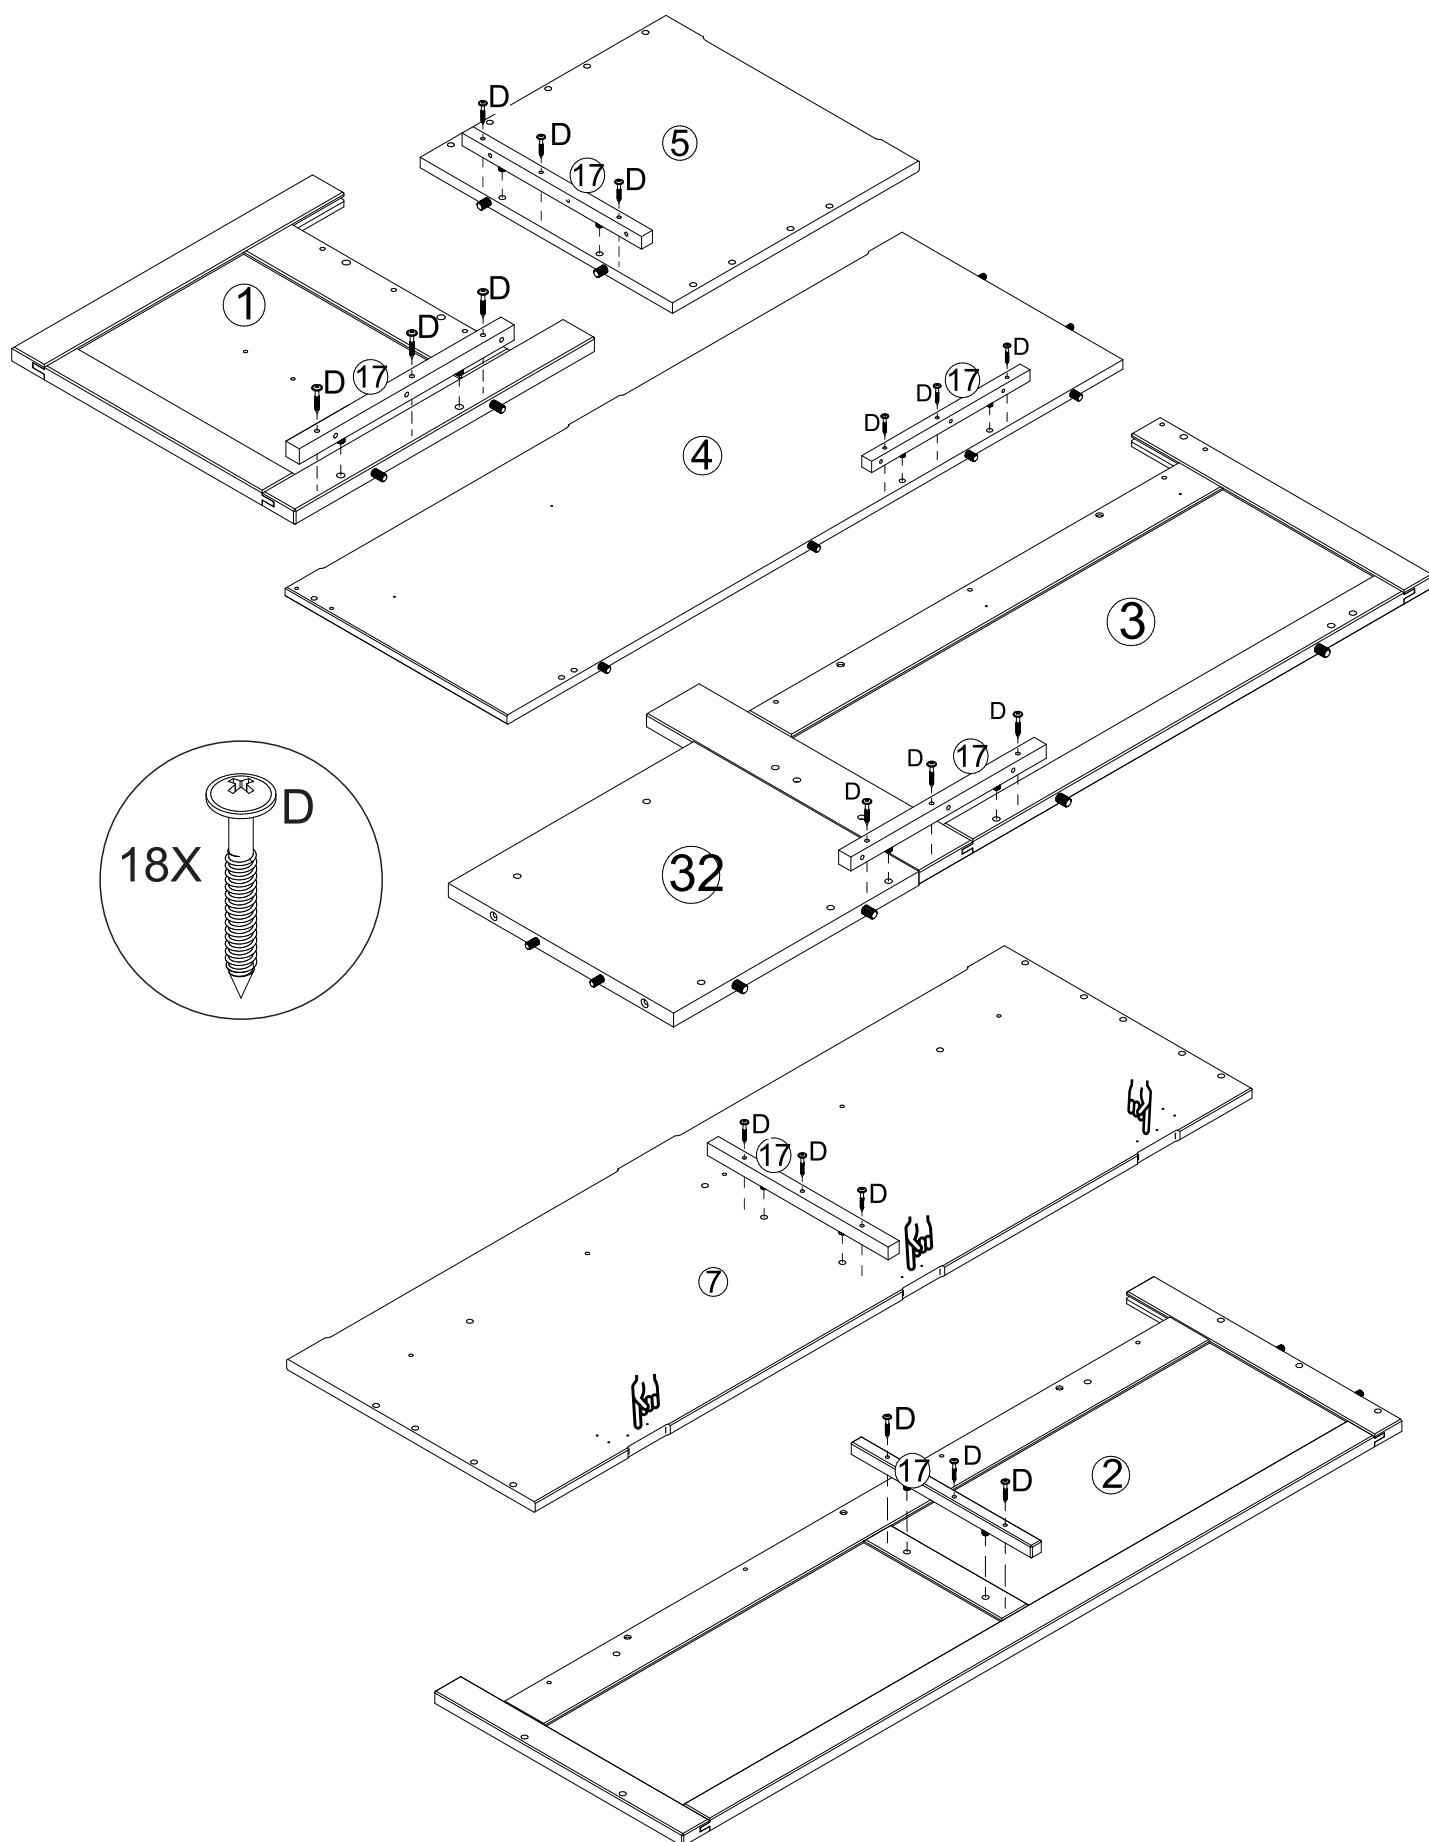


STEP 4)

4.1) JOIN THE PIECES # 10 (2X) TO PIECES #01 AND # 13, USING THE DOWELS ALREADY INSERTED.


4.2) JOIN THE PIECES # 12 TO PIECE #02, USING THE WOODEN DOWELS ALREADY INSERTED.

4.3) FIX THE PIECES USING (09) SCREWS (D), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE, AS SHOWN BELOW.

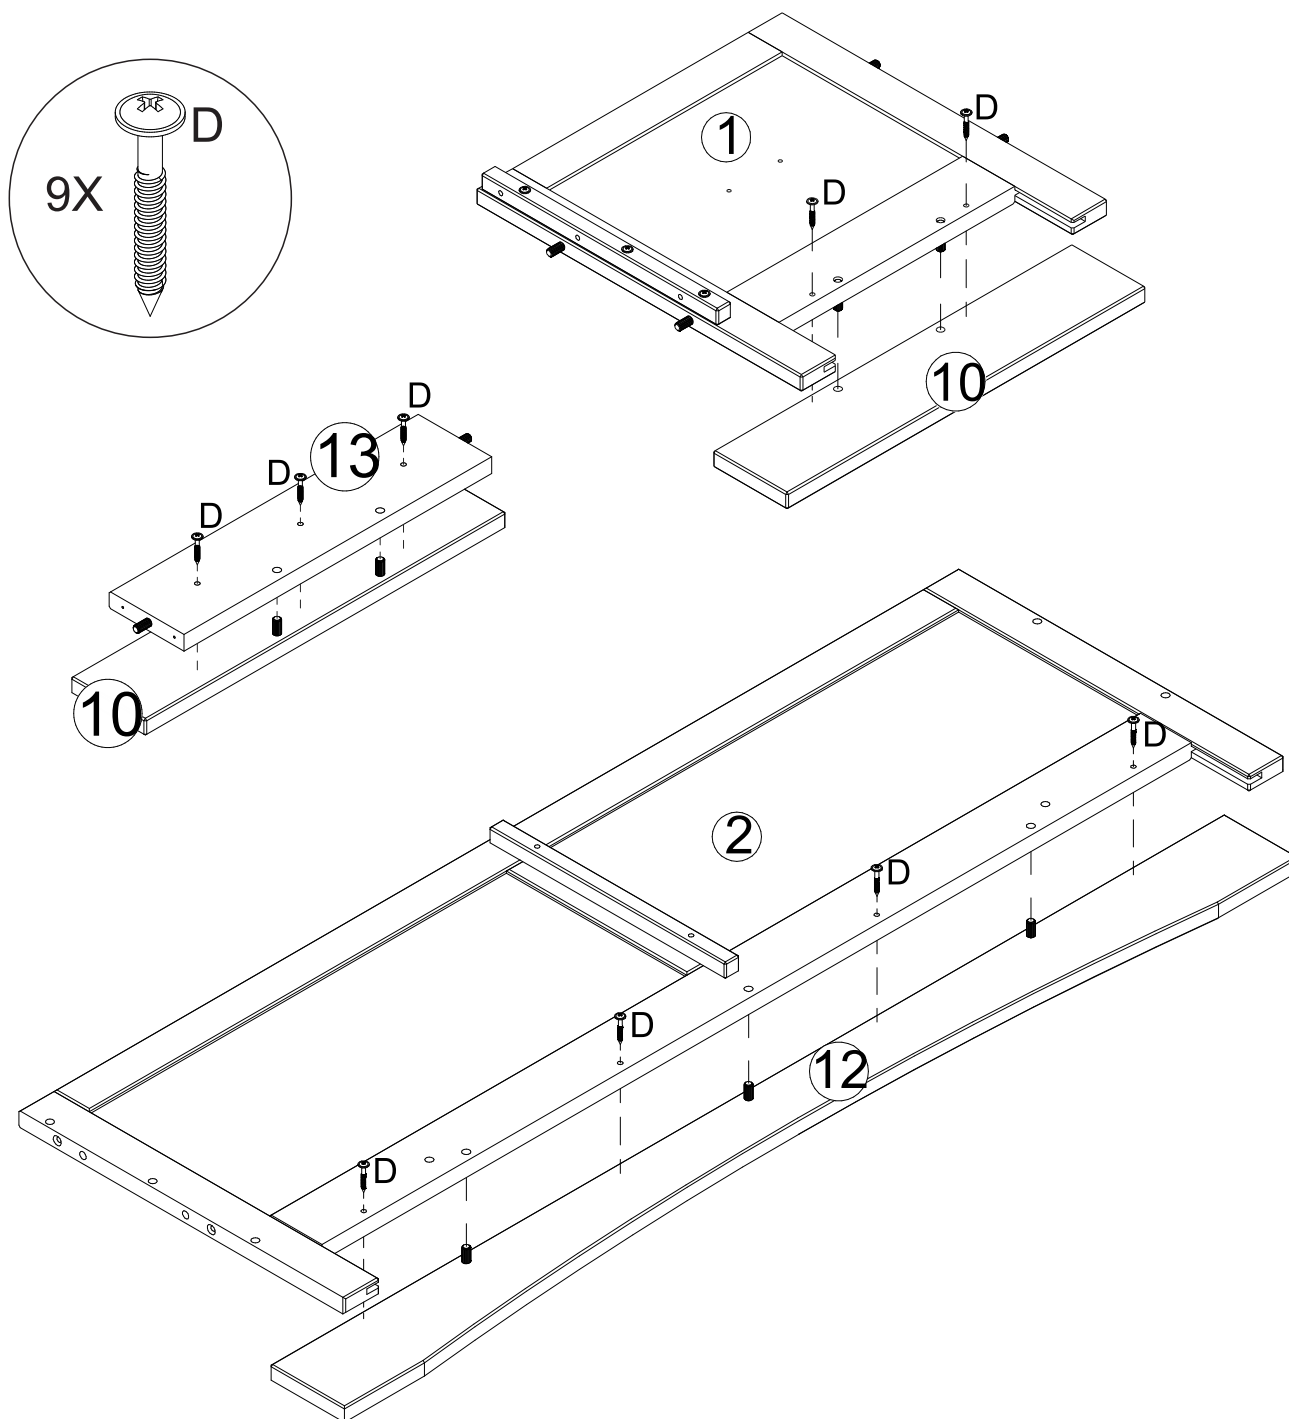

STEP 5)


5.1) FIX LARGE BOTTOM PANEL # 16 TO LARGE FRONT PANEL #2, USING (04) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE, AS SHOWN BELOW.

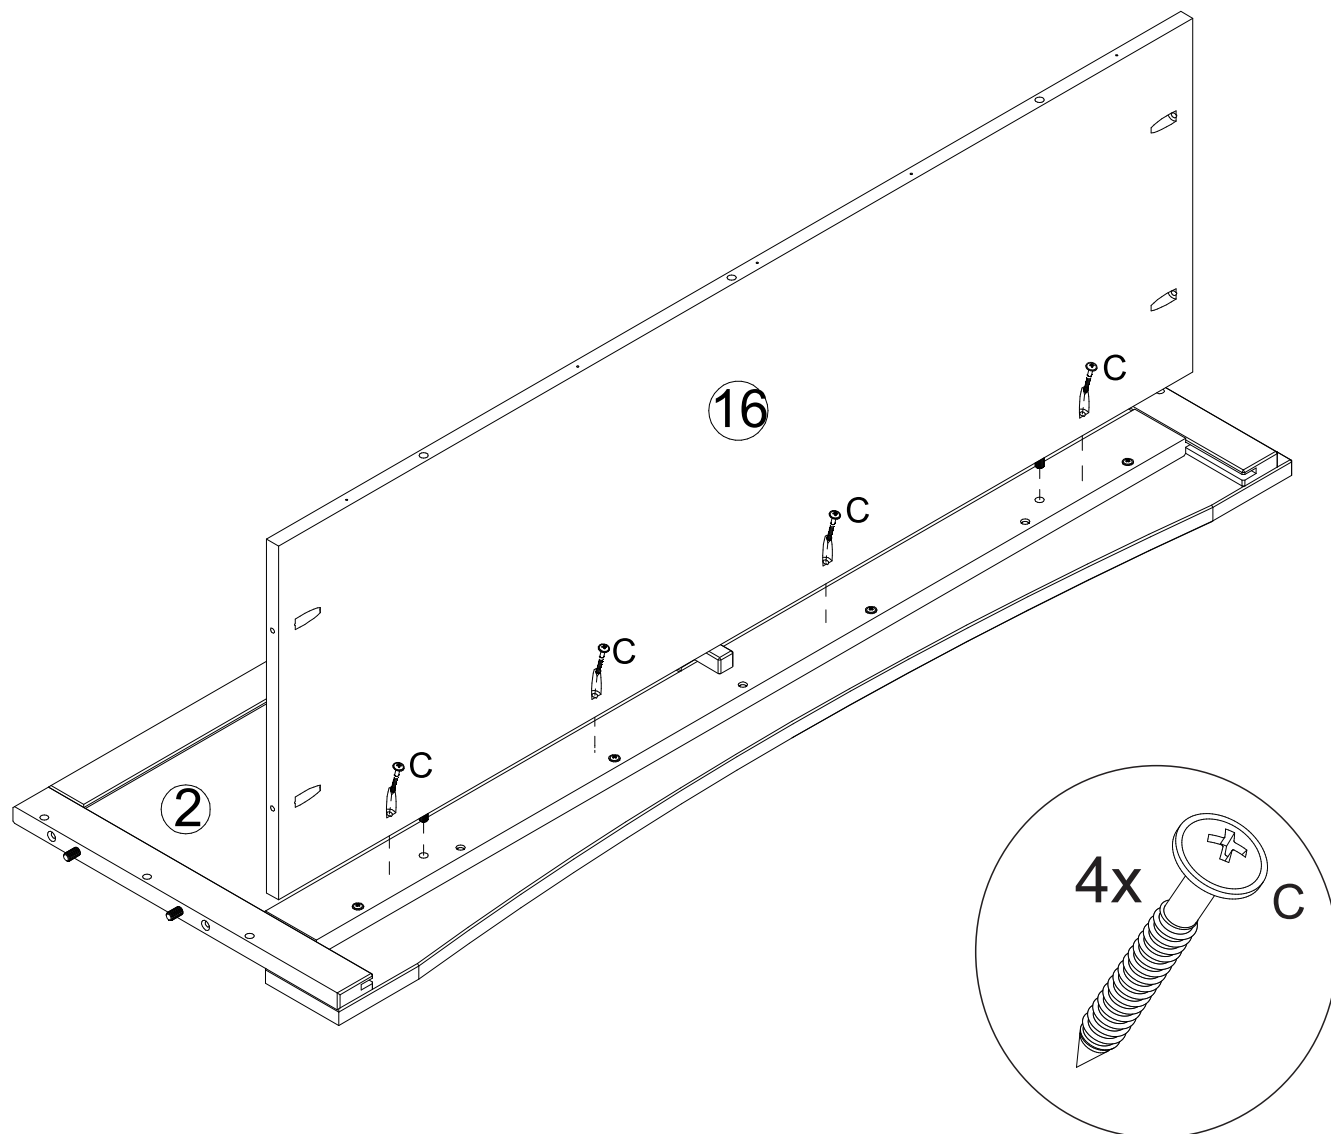

STEP 6)


6.1) JOIN PIECES # 1 AND # 6 TO THE PRE ASSEMBLED STRUCTURE, USING THE WOODEN DOWELS ALREADY FIXED.

6.2) FIX DIVISION #6 TO LARGE FRONT PANEL #2, USING (03) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE.

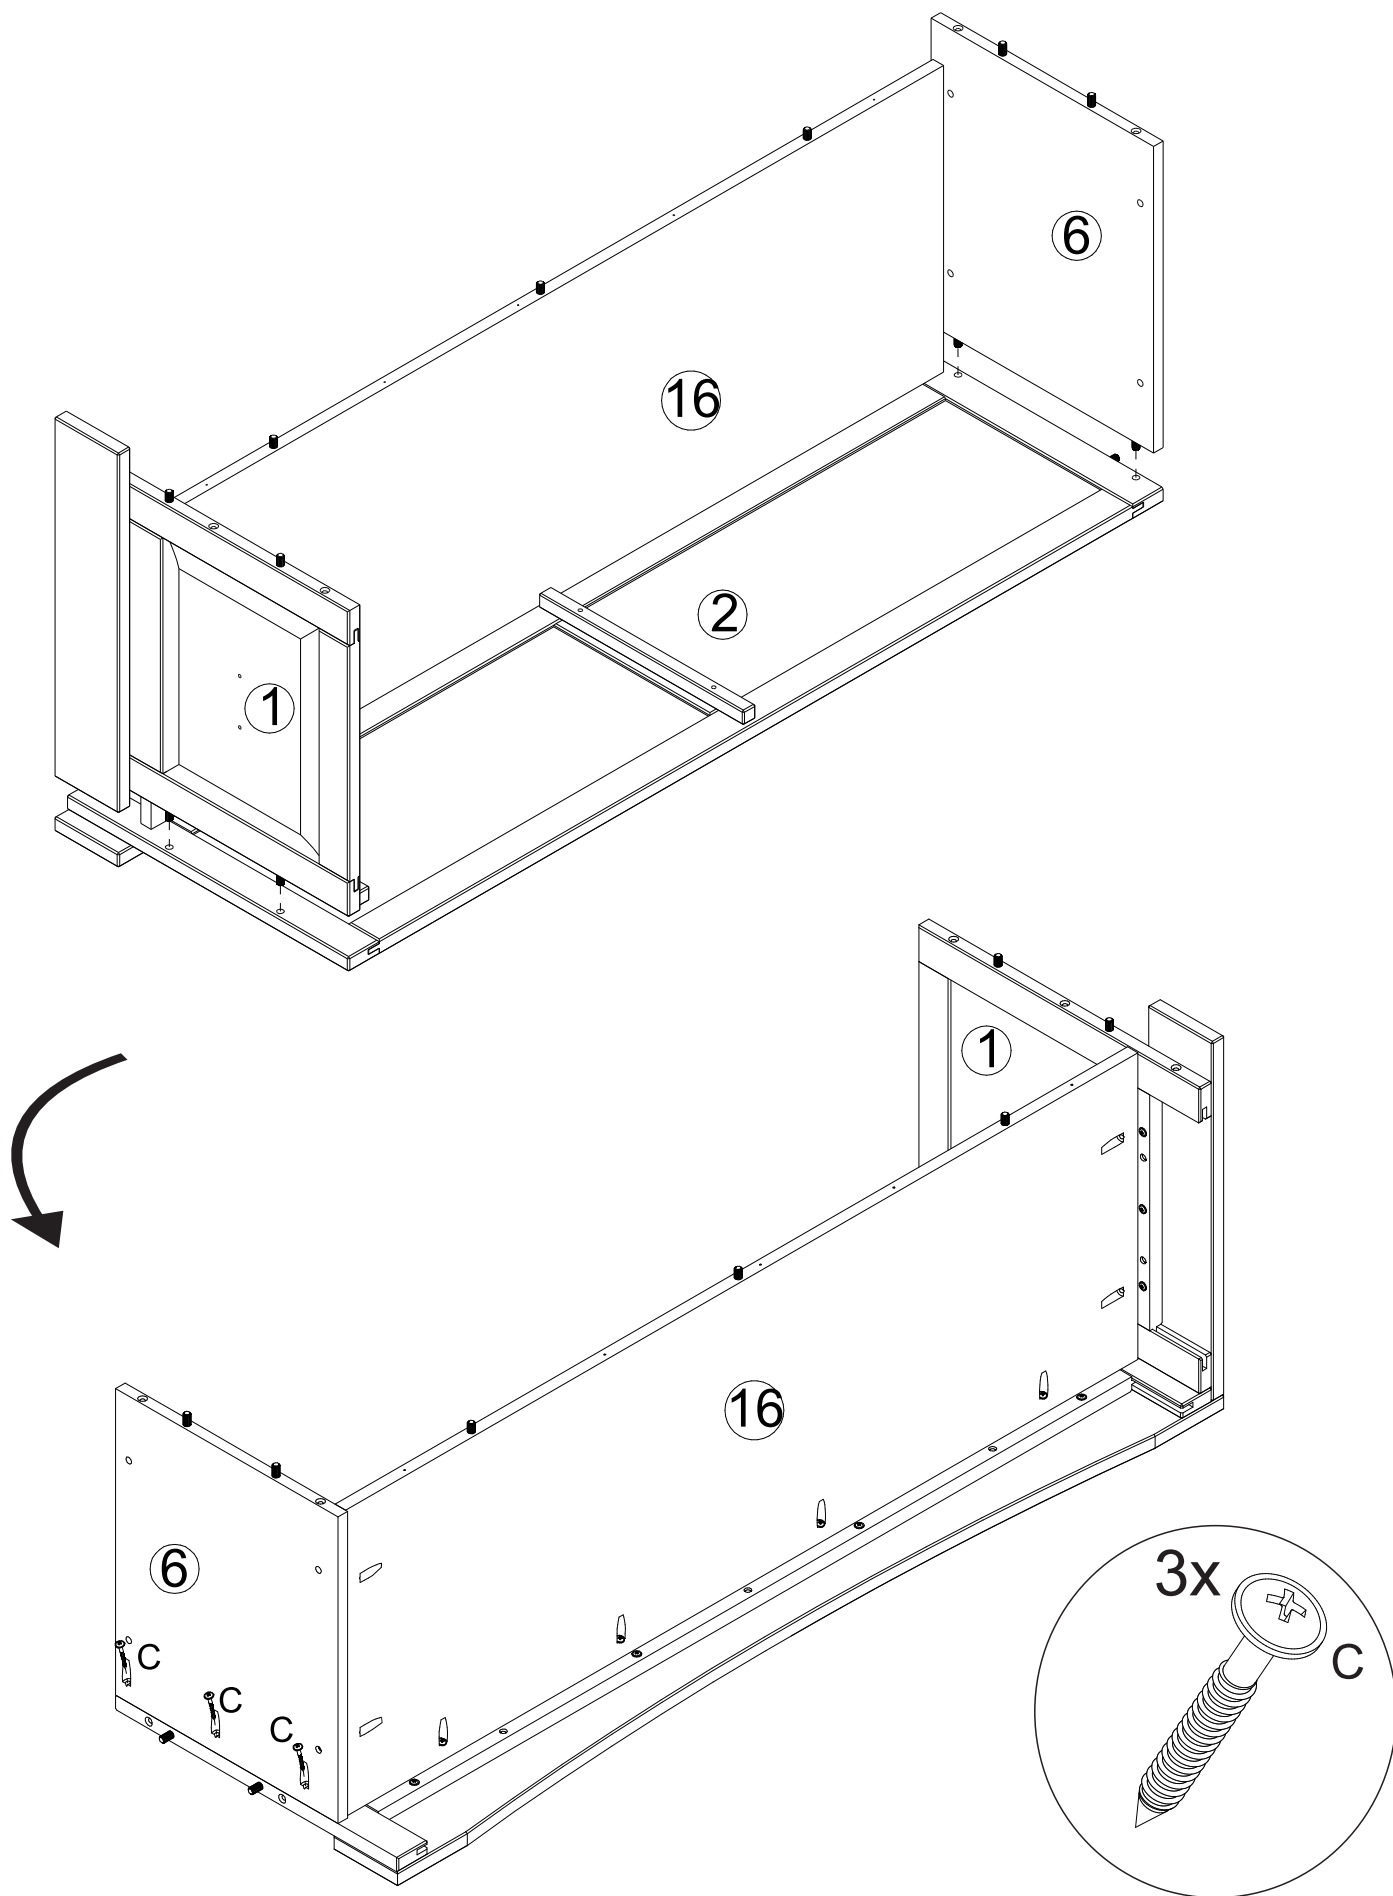

STEP 7)


7.1) FIX LARGE BACK STORAGE PANEL #07 TO PRE ASSEMBLED STRUCTURE, USING (08) SCREWS (C), (04) SCREWS (G), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), AN ALLEN WRENCH (PROVIDED (J), THE WOODEN DOWELS ALREADY INSERTED AND THE PRE-DRILLED HOLES AS GUIDE .

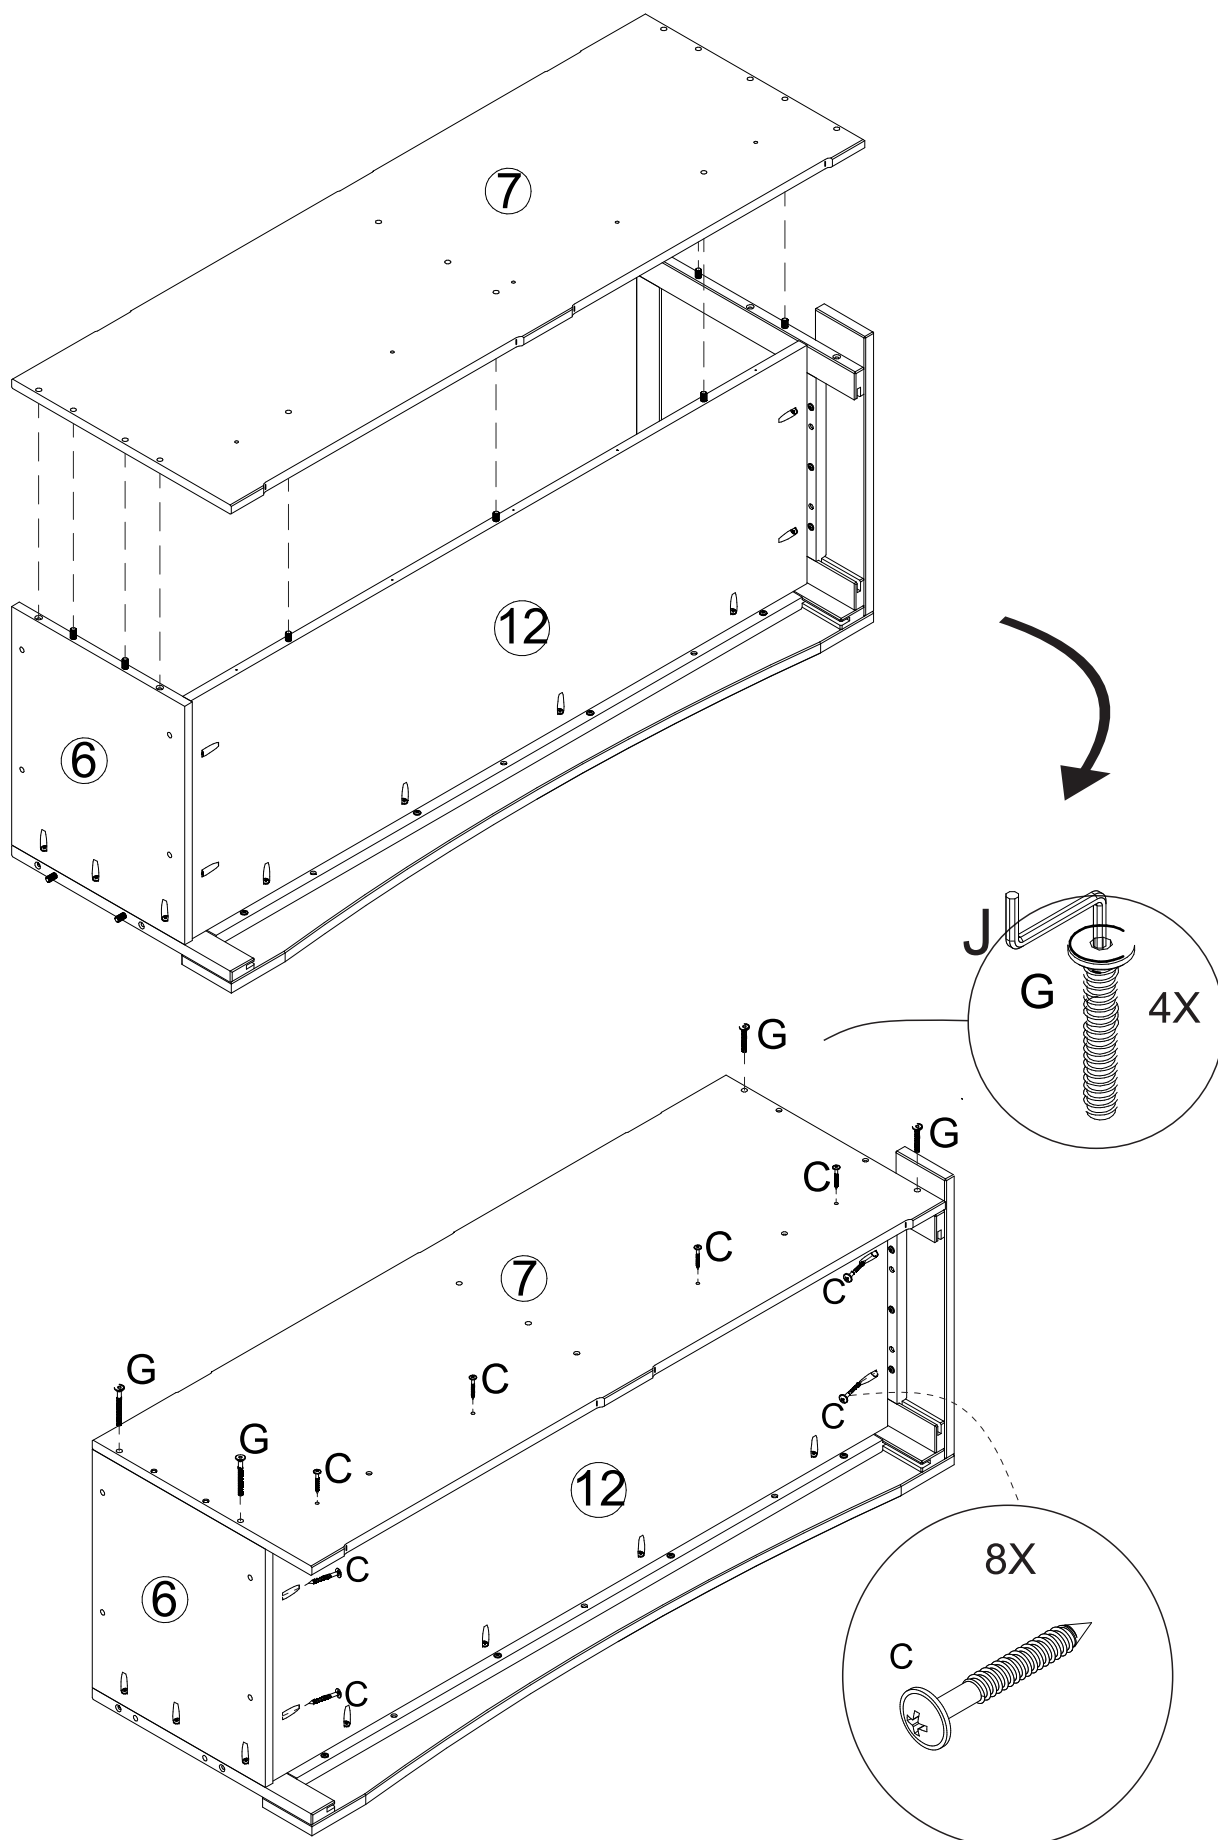

STEP 8)

8.1) FIX PIECES #01 AND #02 USING (03) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED AND THE PRE DRILLED HOLES AS GUIDE).

8.2) IF YOU LIKE TO USE THE DIVISION IN YOUR STORAGE AREA, FIX THE STORAGE DIVISIONS #15 TO PIECES # 17 ALREADY FIXED USING (04) SCREWS (Q), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE.

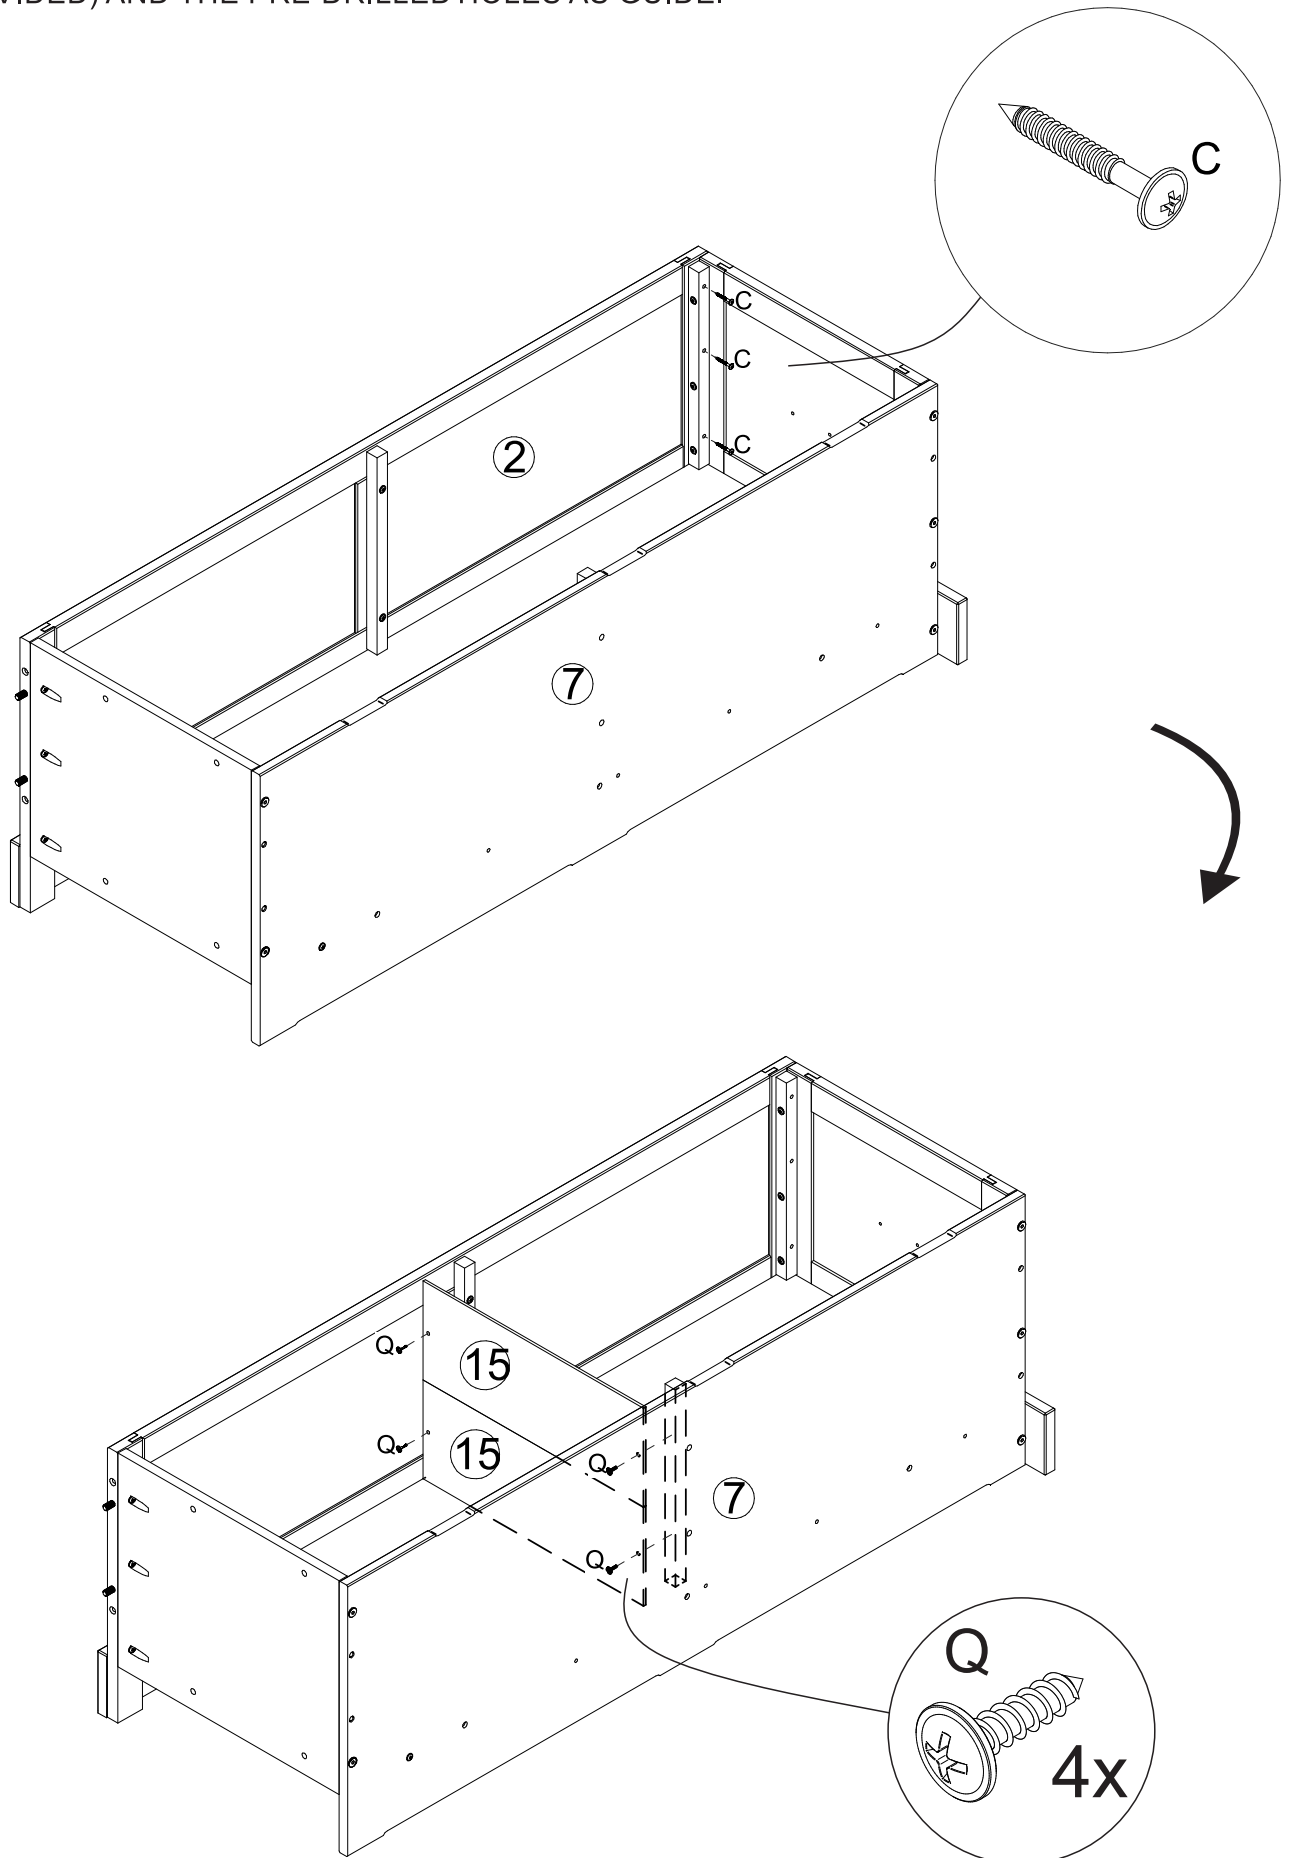


STEP 9)

9.1) FIX THE METAL GLIDE (N) TO SMALL FRONT PANEL #03, USING (03) SCREWS (E) AND A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED).

9.2) FIX THE METAL GLIDE (M) TO SMALL STORAGE BACK PANEL #04, USING (03) SCREWS (E) AND A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED).


NOTE: PAY ATTENTION ON THE CORRECT POSITION OF THE SCREWS

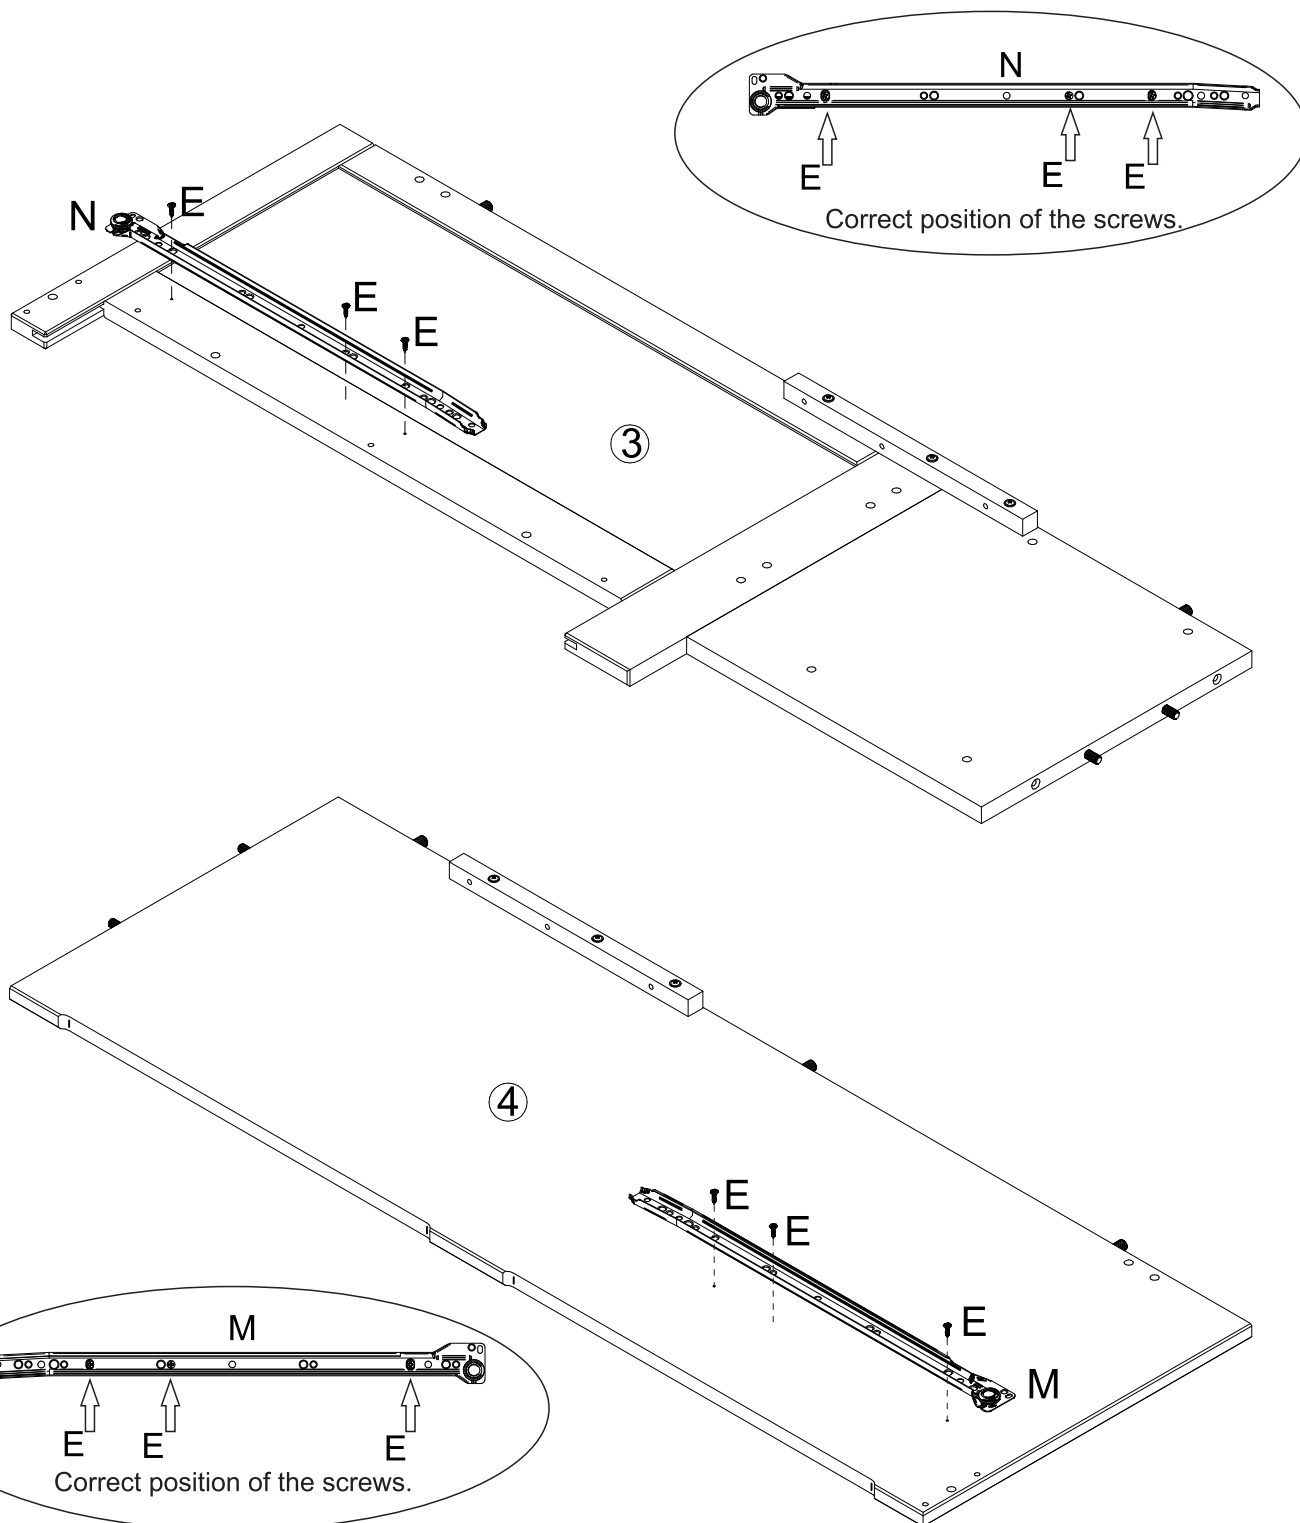

STEP 10)




10.1) FIX THE SET OF PIECES #10 AND #13 TO SMALL FRONT PANEL #03 AND SMALL STORAGE BACK PANEL #04, USING (04) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), THE WOODEN DOWELS ALREADY INSERTED AND THE PRE-DRILLED HOLES AS GUIDE .

10.2) FIX UNION RAIL # 14 TO SMALL FRONT PANEL #03 AND SMALL STORAGE BACK PANEL #04, USING (02) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), THE WOODEN DOWELS ALREADY INSERTED AND THE PRE-DRILLED HOLES AS GUIDE .

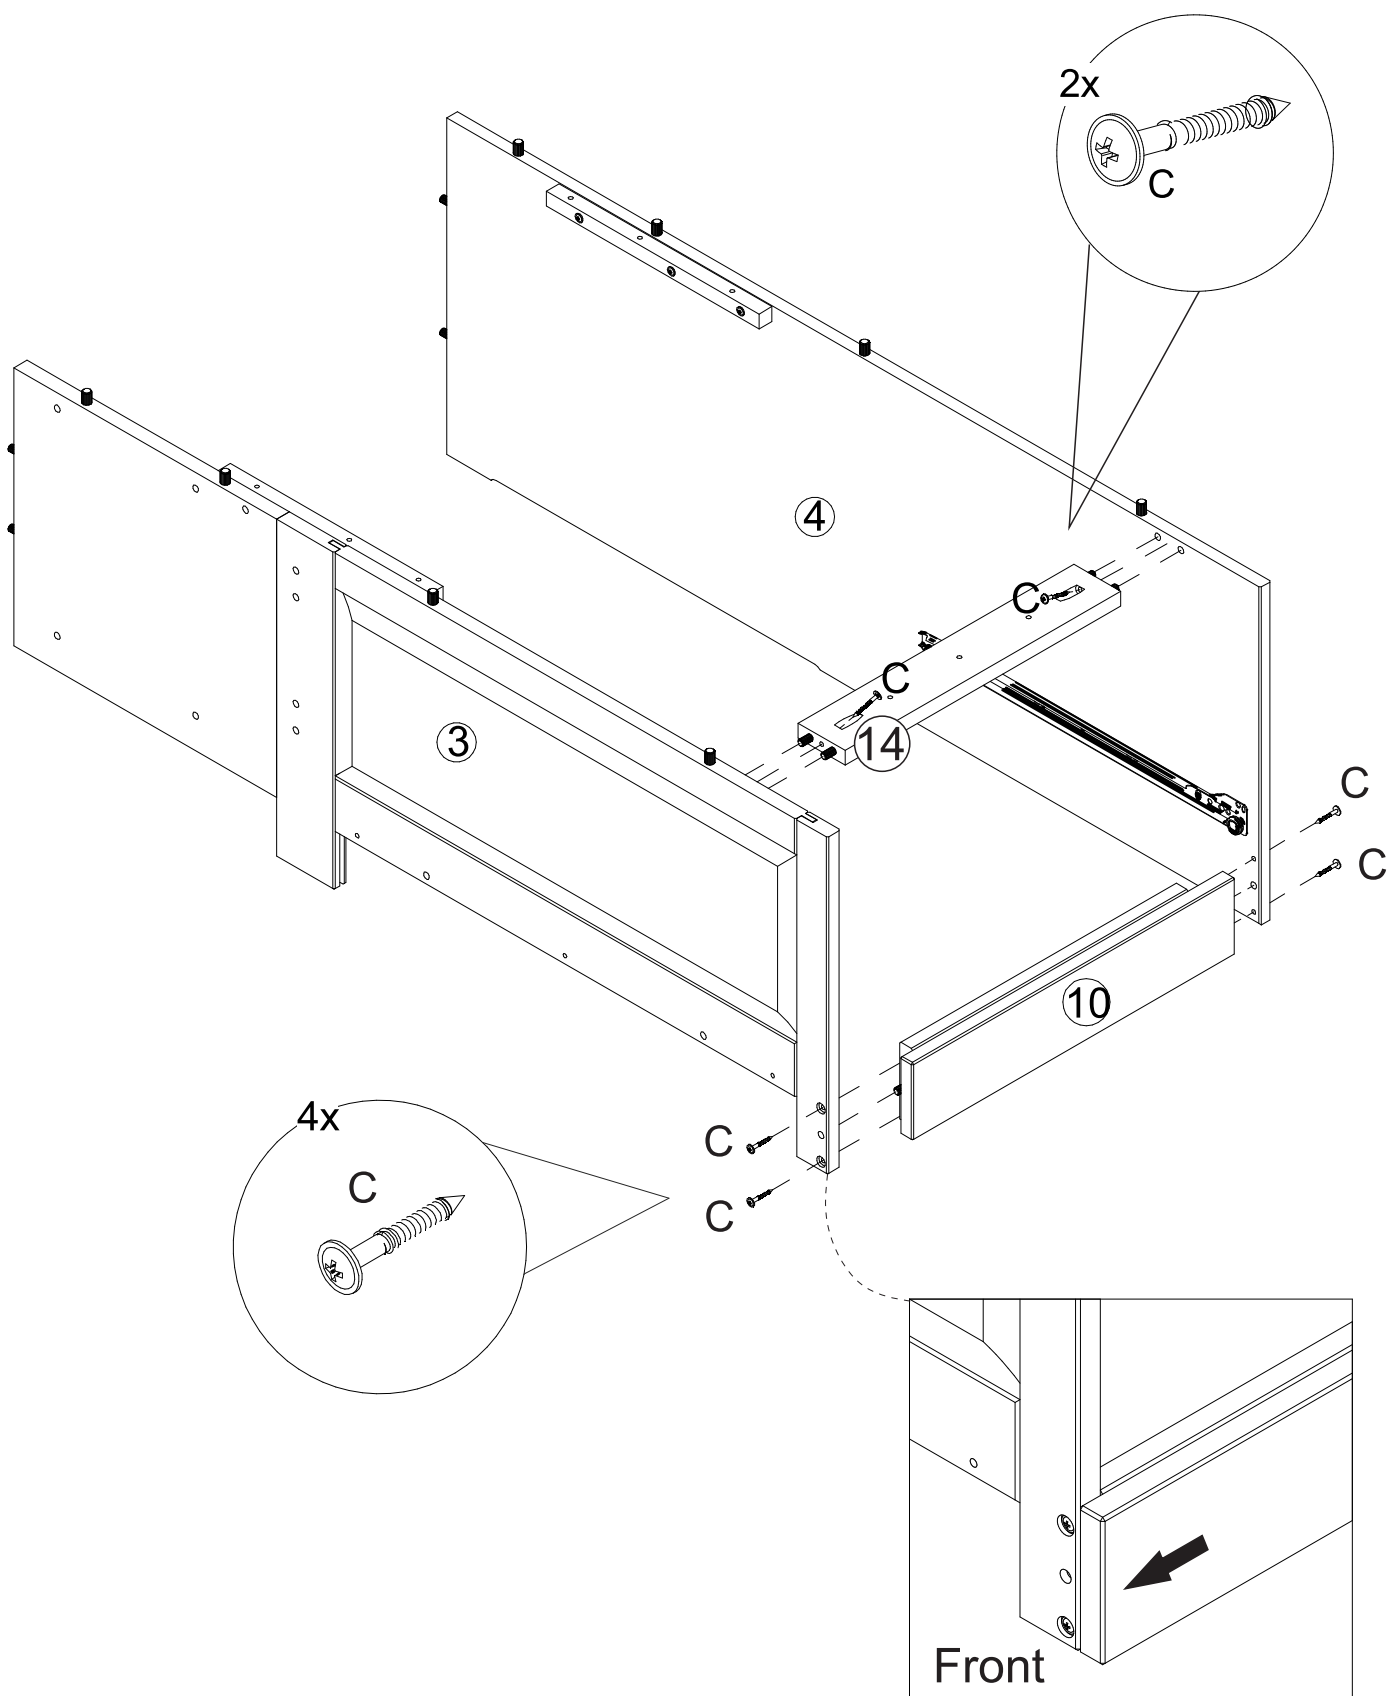


STEP 11)

11.1 COMPLETE THE ASSEMBLY FIXING THE SMALL BACK PANEL # 05 WITH (04) SCREWS (G), AN WRENCH (PROVDED J), THE WOODEN DOWELS ALREADY INSERTED AND THE PRE-DRILLED HOLES ALLEN AS GUIDE .

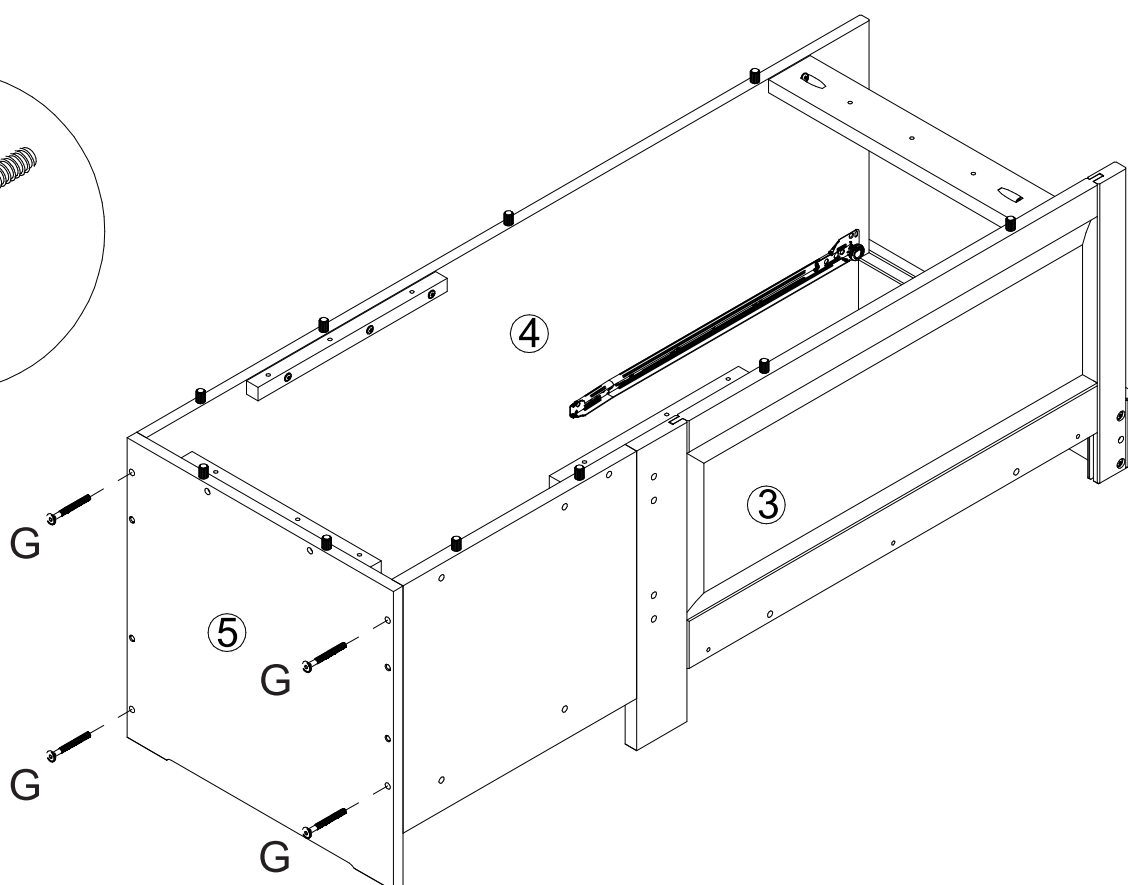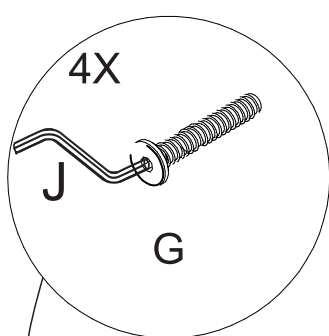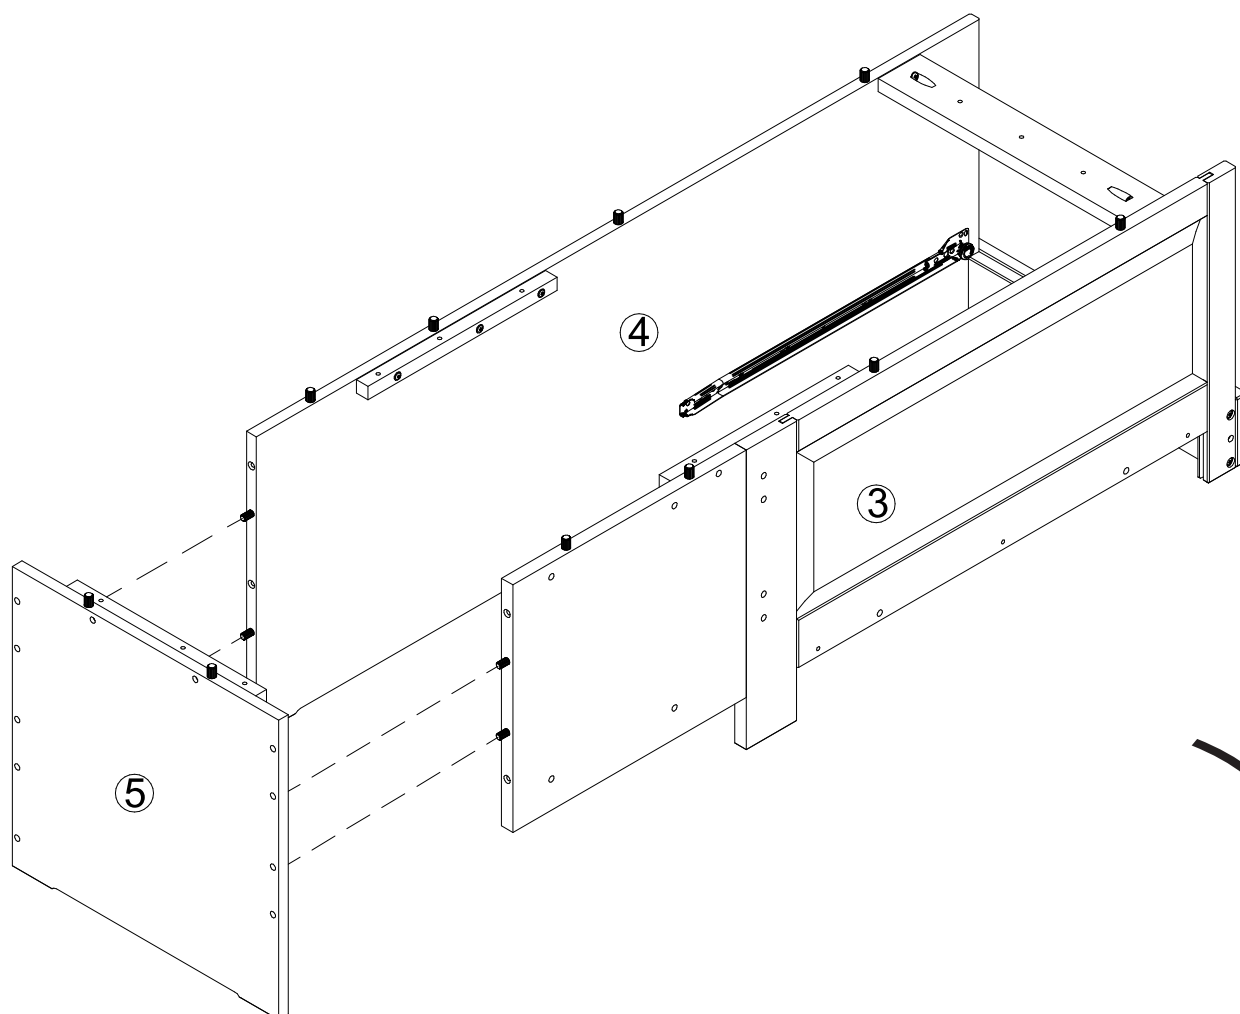


STEP 12)

12.1) FIX SMALL FRONT SKIRTING BOARD #11 TO SMALL FRONT PANEL #03, USING (03) SCREWS (D), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), THE WOODEN DOWELS ALREADY INSERTED AND THE PRE-DRILLED HOLES AS GUIDE .

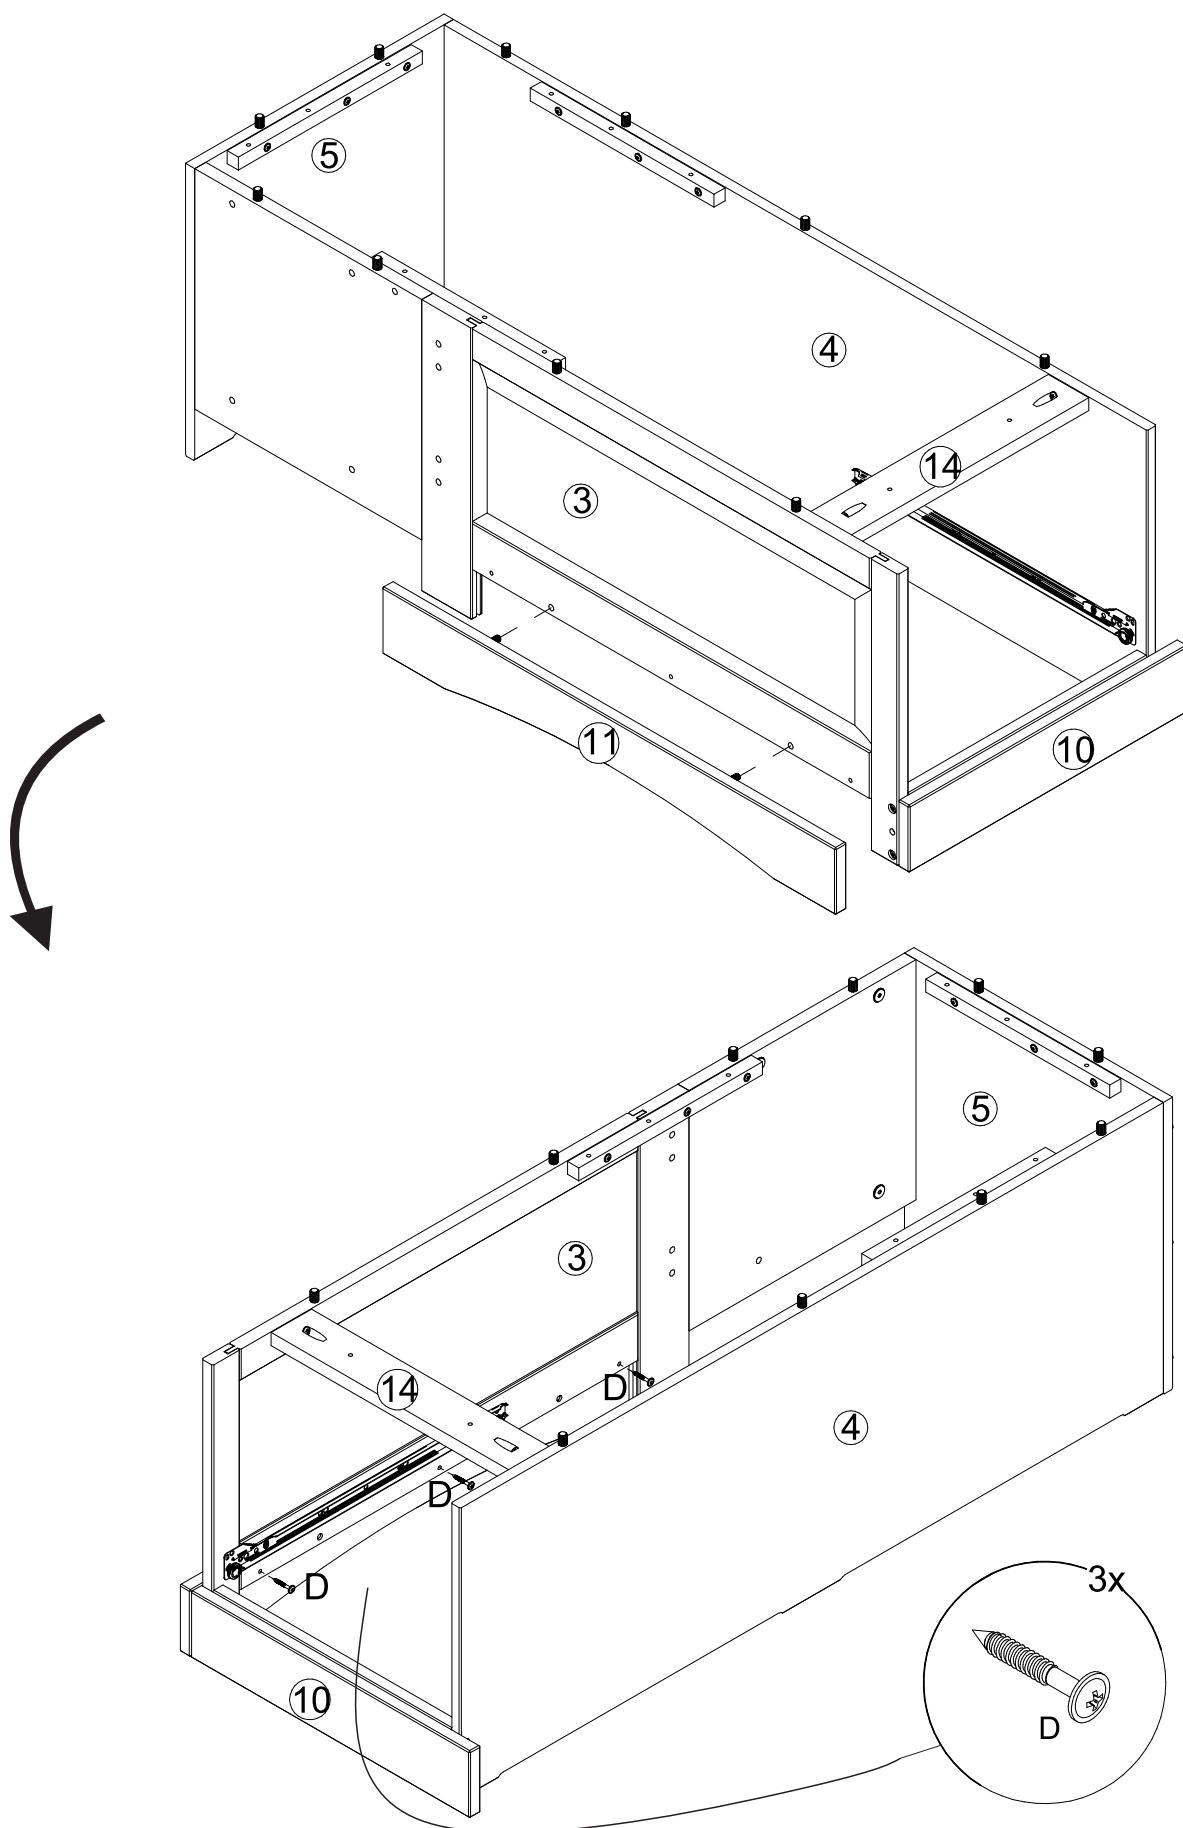

STEP 13)


13.1) JOIN BOTH PRE ASSEMBLED STRUCTURES USING THE WOODEN DOWELS AS GUIDE.

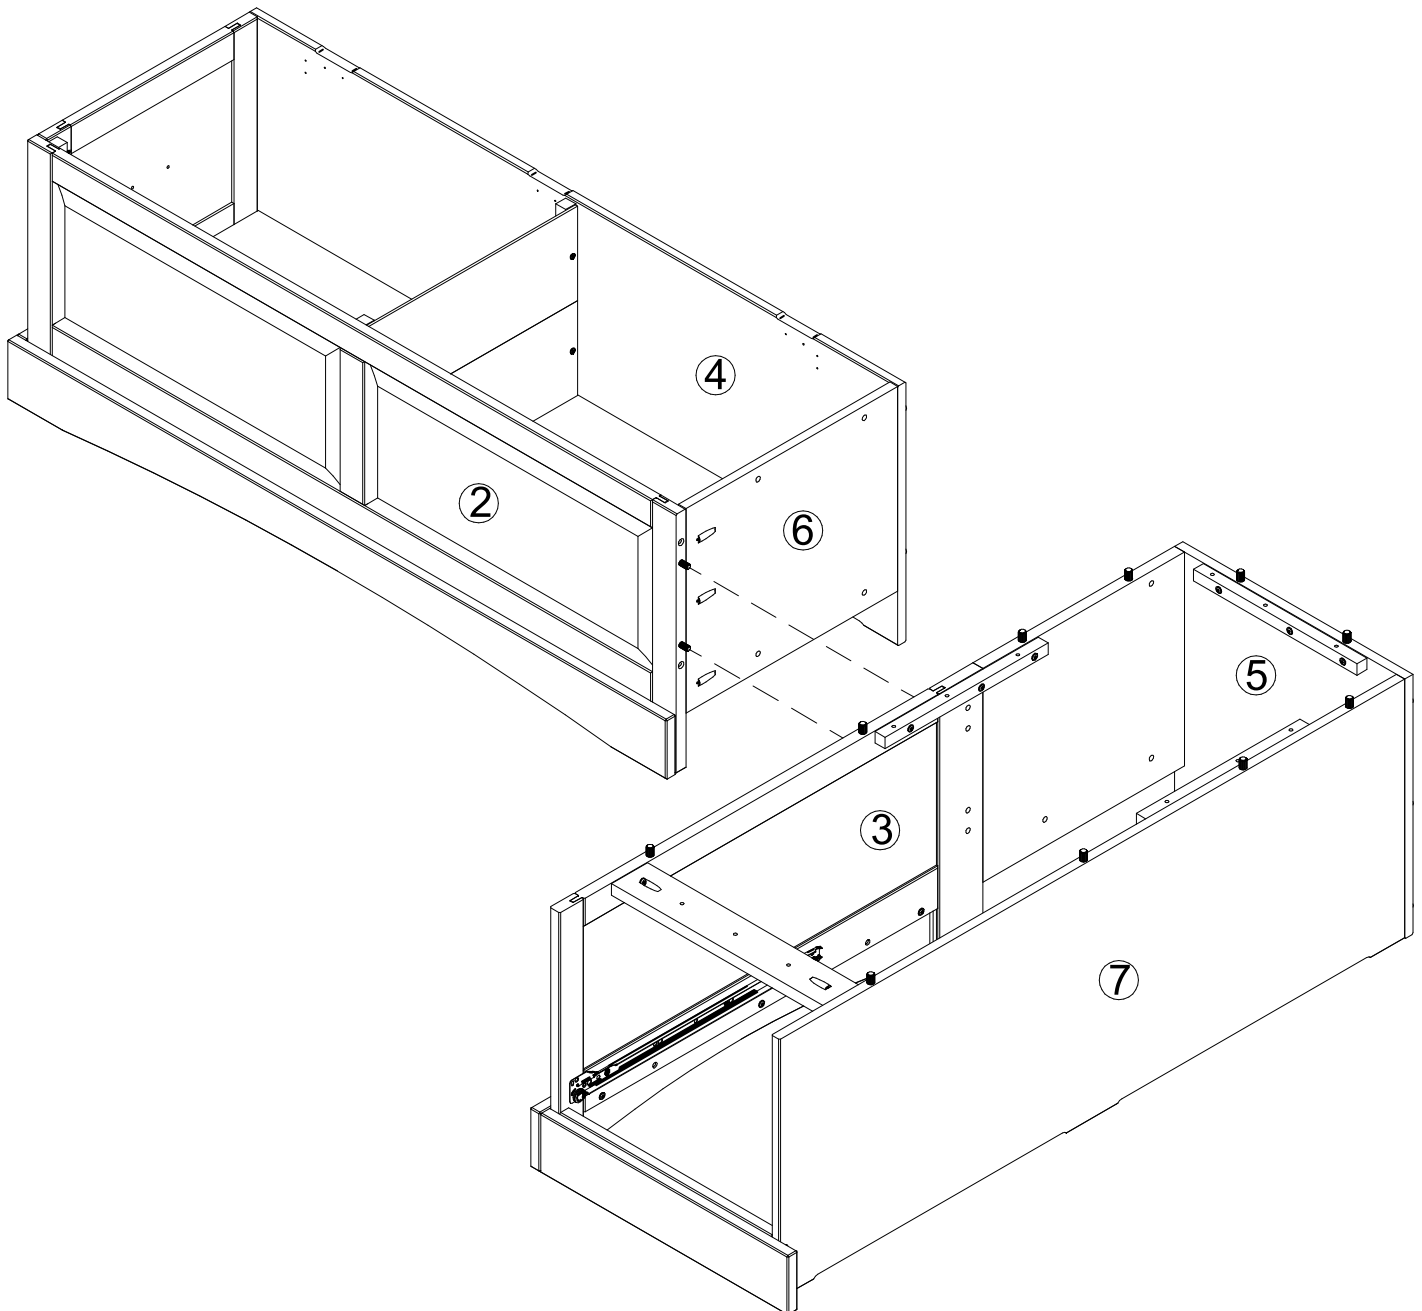

STEP 14)


14.1) FIX PIECES USING (02) SCREWS (G) AND AN ALLEN WRENCH (PROVDDED J).

14.2) COMPLETE THE ASSEMBLY USING (04) STEMS (I), (08) UNION SCREWS (H) AND THE ALLEN WRENCH PROVIDED (J), AS PER DRAWING AND DETAILS.

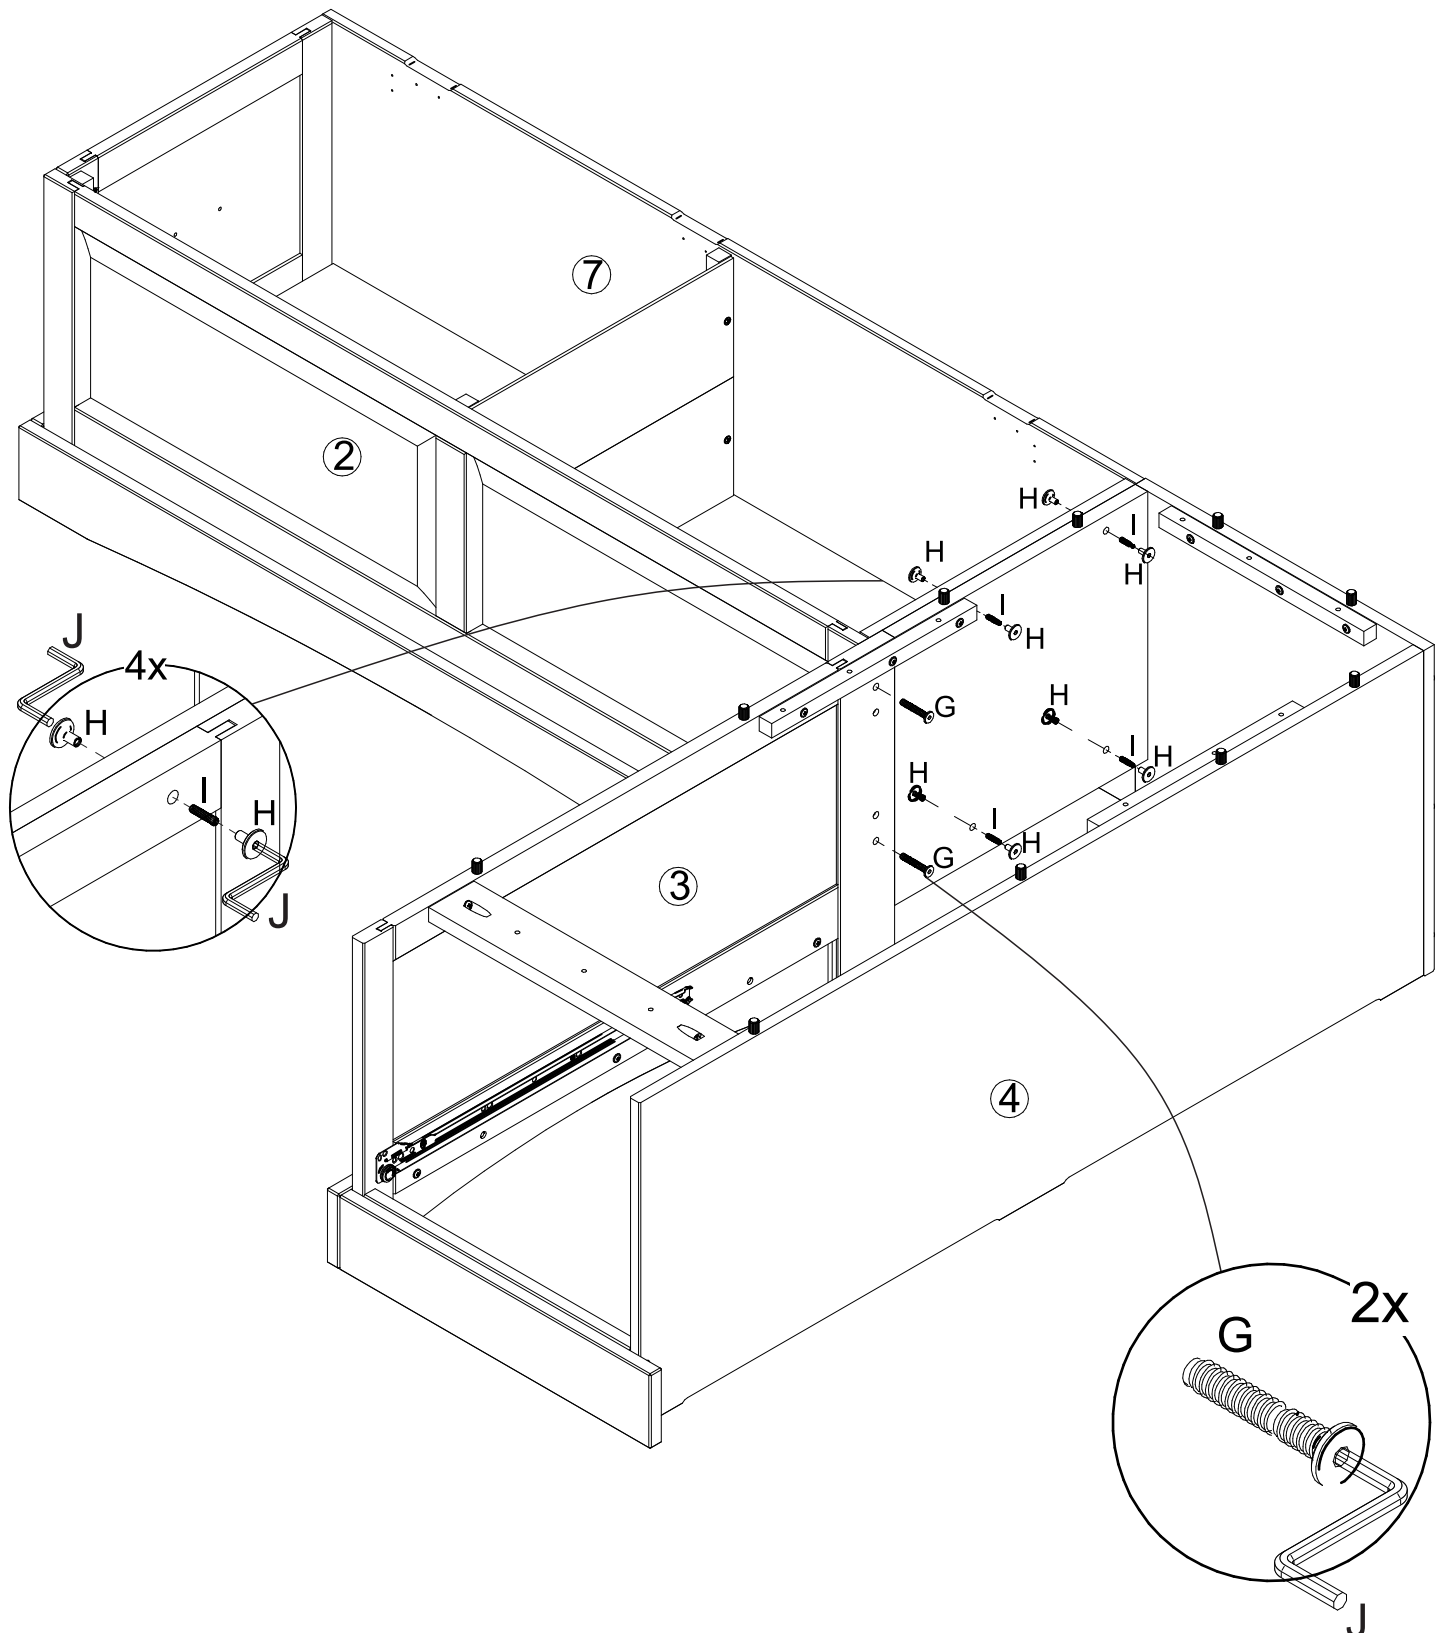


STEP 15)

15.1) JOIN THE FIXED SEAT #9 TO ASSEMBLED STRUCTURE USING THE WOODEN DOWELS ALREADY INSERTED, AS PER DRAWING BELOW:

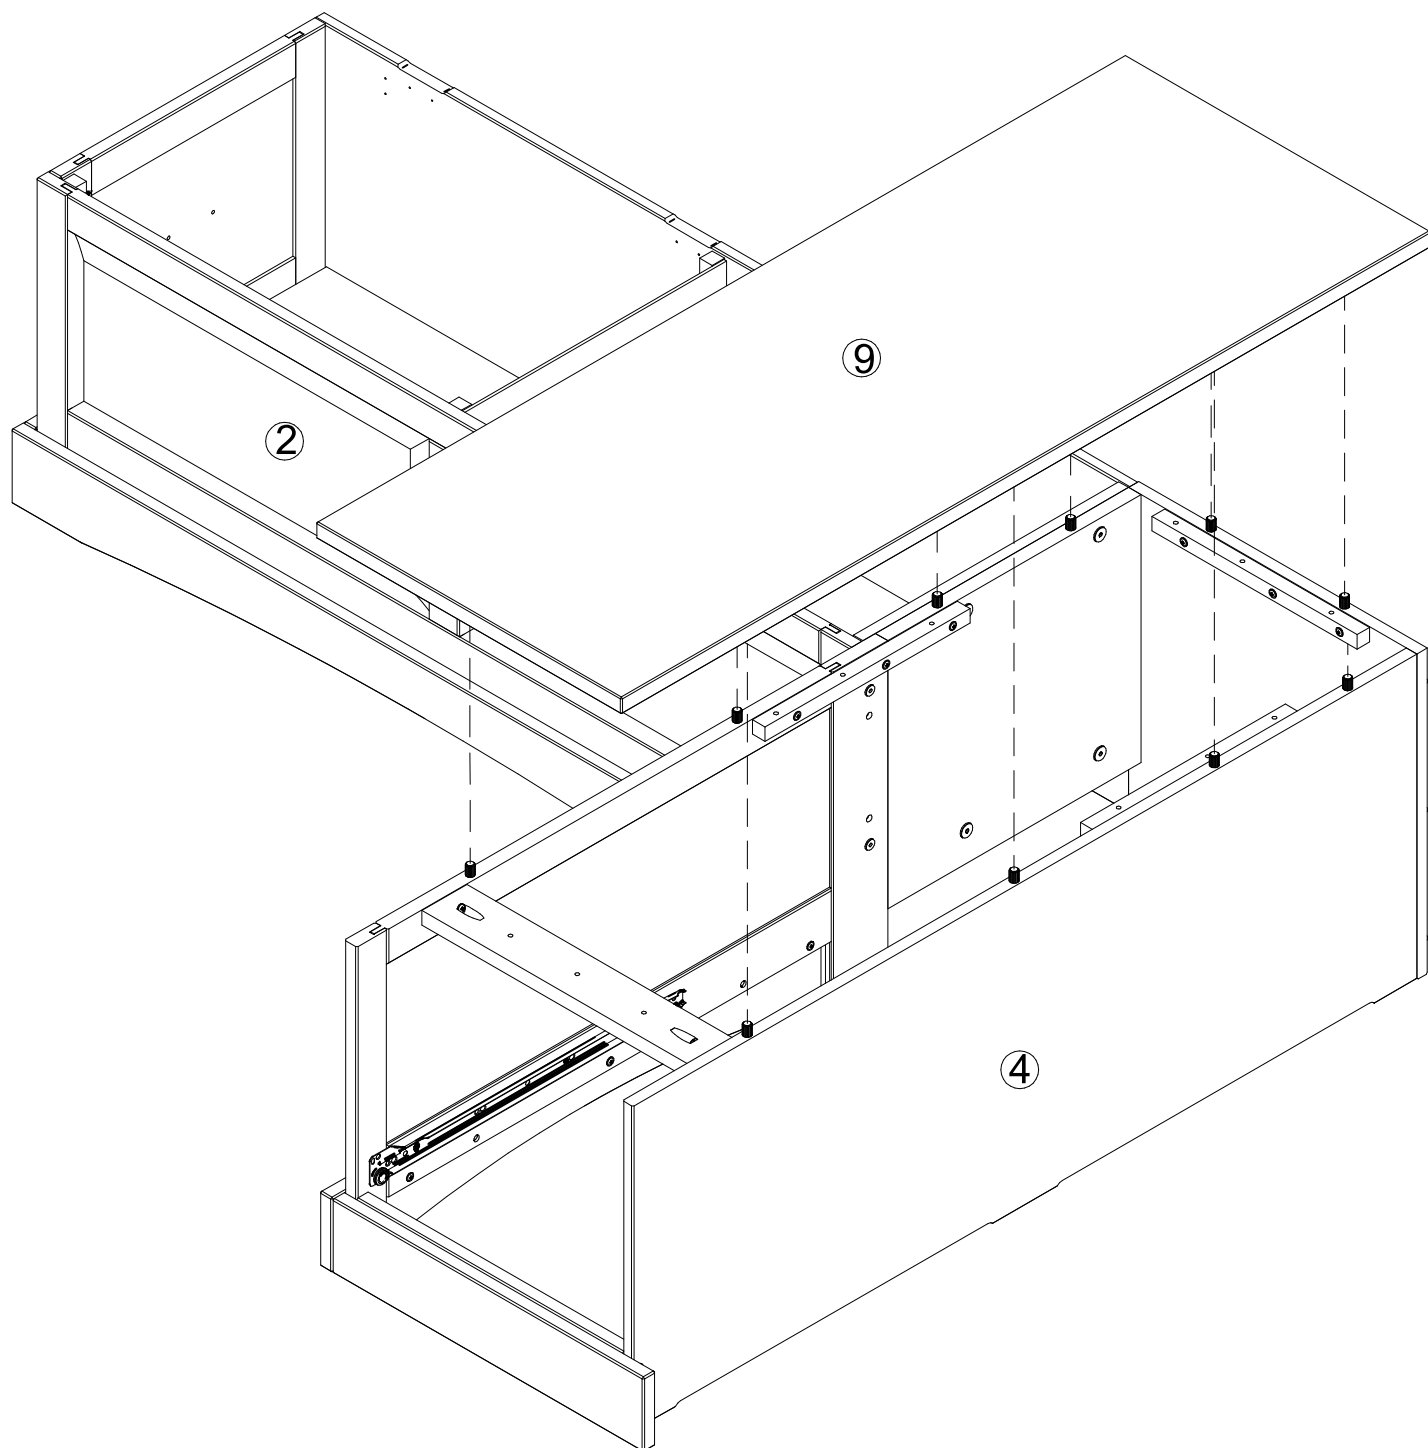

STEP 16)

16.1) FIX THE SEAT USING (12) SCREWS (D), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE.

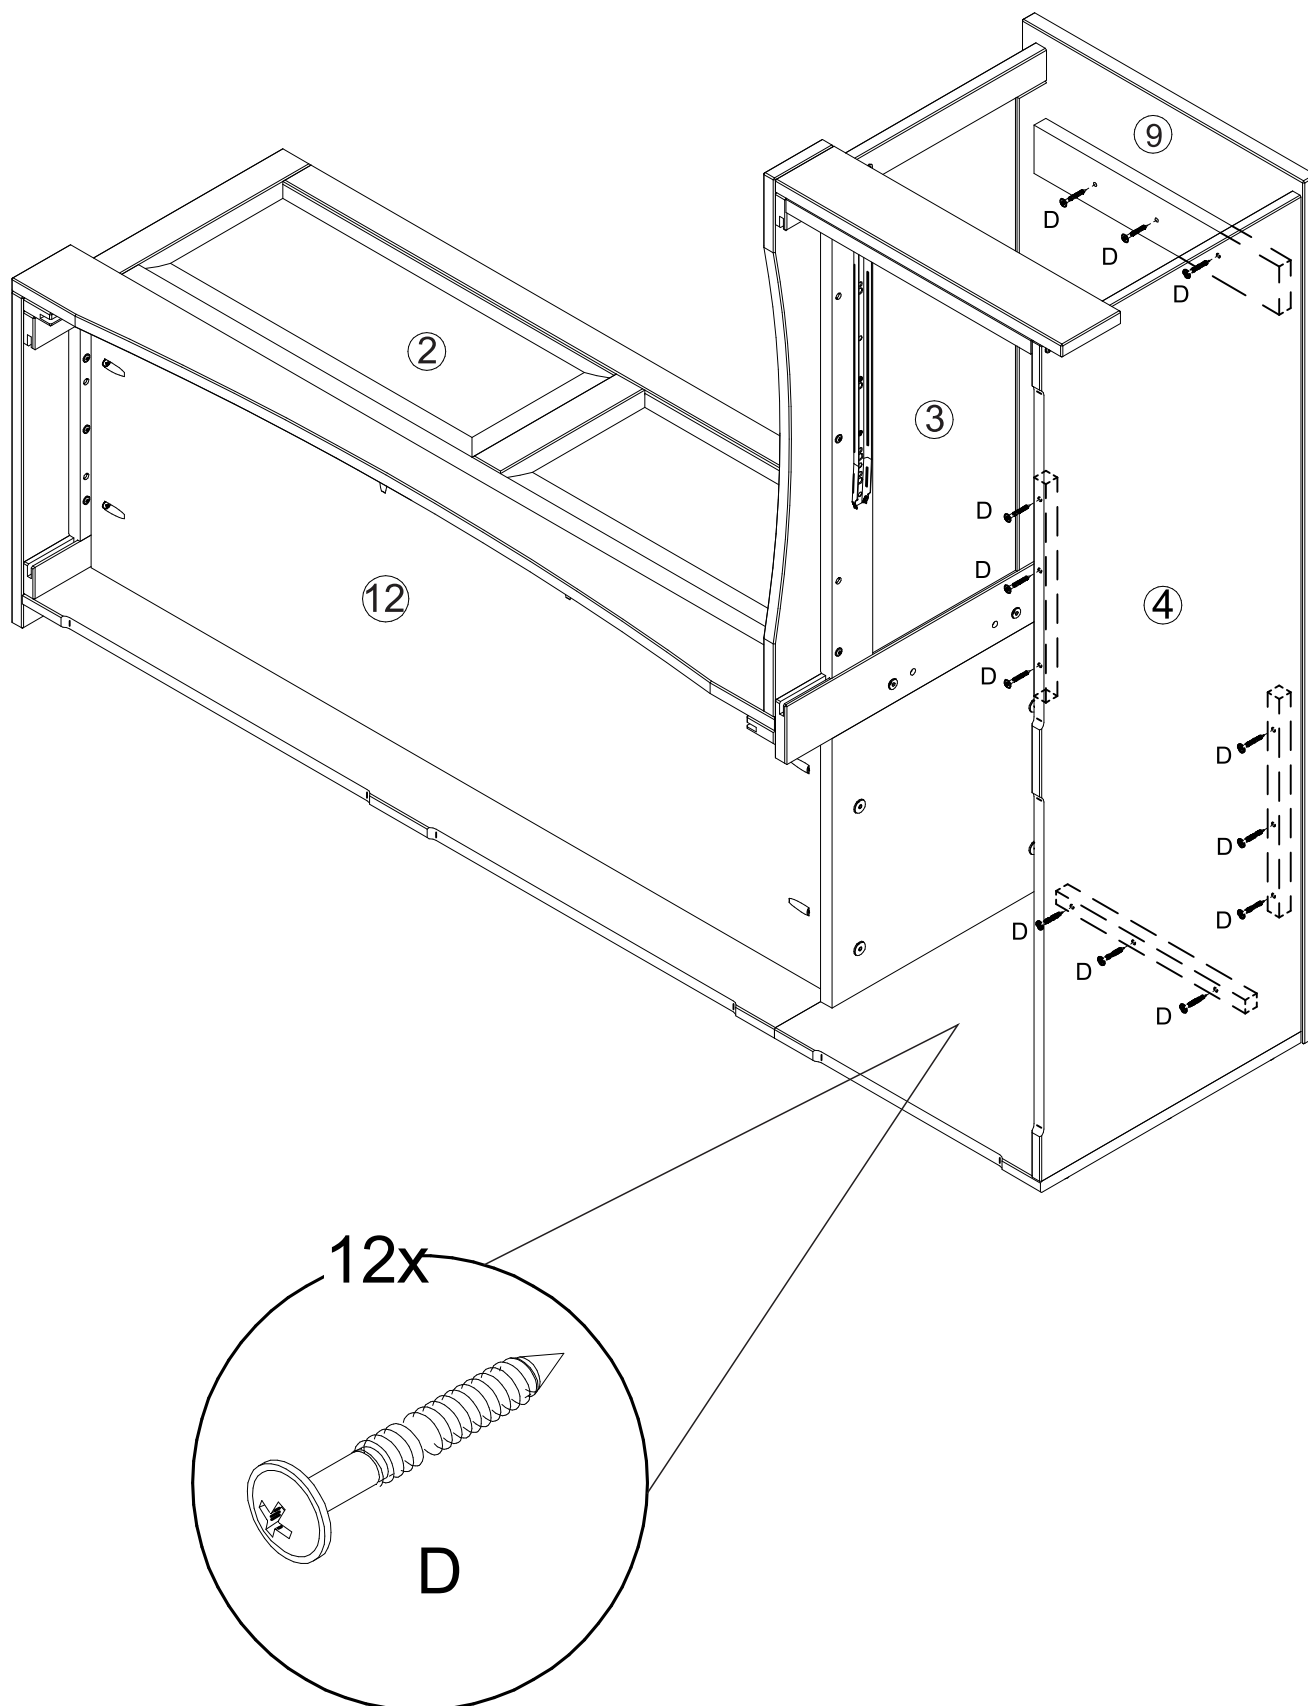

STEP 17)**DRAWER ASSEMBLY**

17.1) FIX DRAWER BACK PANEL # 21 TO SIDE PANELS # 20 AND # 22, USING (04) SCREWS (D), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE .

17.2) SLIDE THE BOTTOM PANEL # 23, USING THE GROOVE AS GUIDE.


17.3) ATTACH (01) HANDLE (P) TO DRAWER FRONT PANEL #19, USING (02) SCREWS (L), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE .

17.4) INSERT (04) WOODEN DOWELS (A) TO PIECES # 20 AND # 22. THEN JOIN THE DRAWER FRONT PANEL # 19.


17.5) FIX DRAWER FRONT PANEL # 19, USING (04) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE .

17.6) FIX THE METAL GLIDE (N) TO PIECE # 20 AND THE METAL GLIDE (M) TO PIECE #22, USING (06) SCREWS (E) AND A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED). PAY ATTENTION ON THE DRAWING AND DETAILS.


17.1)

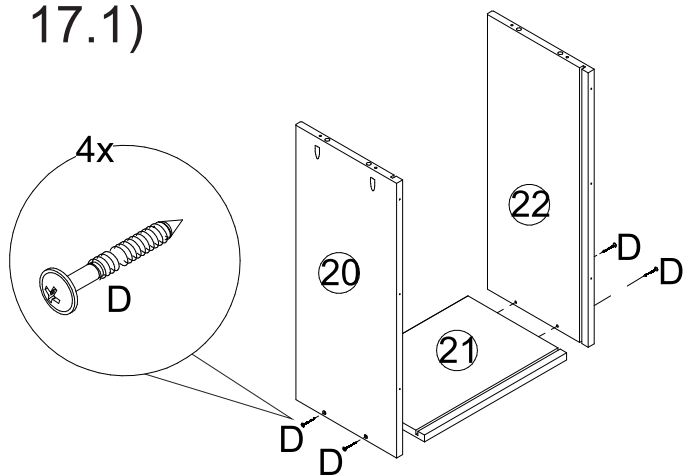


17.2)

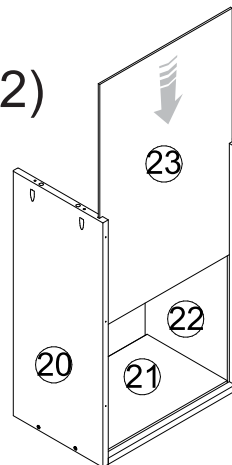


17.3)

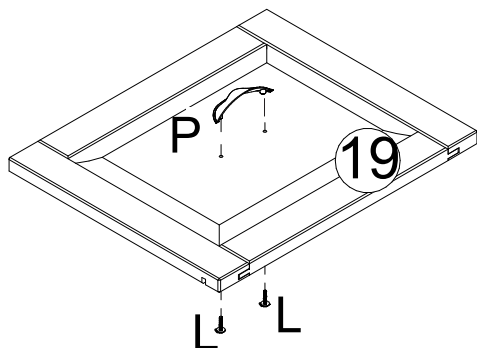





17.4)

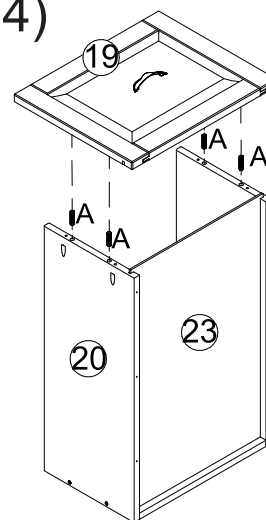

17.5)

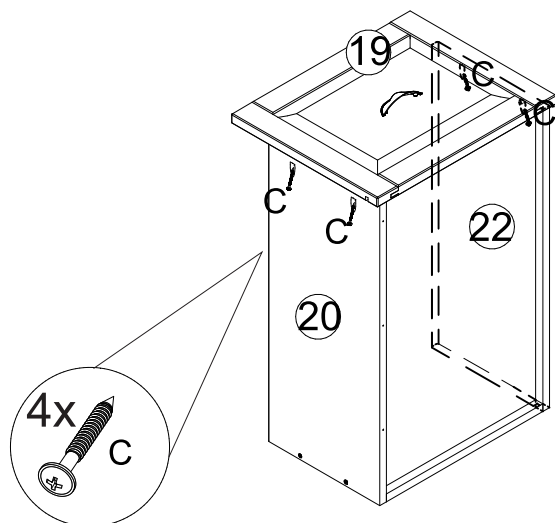


17.6)

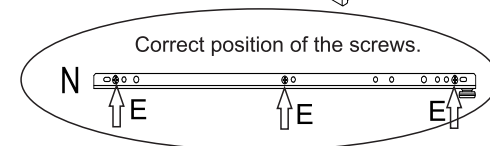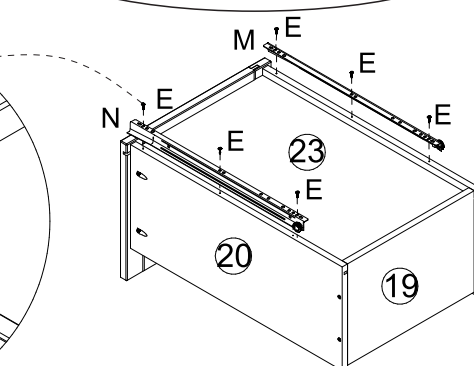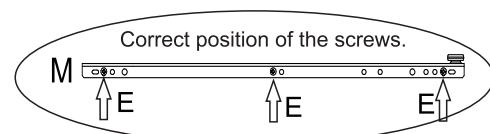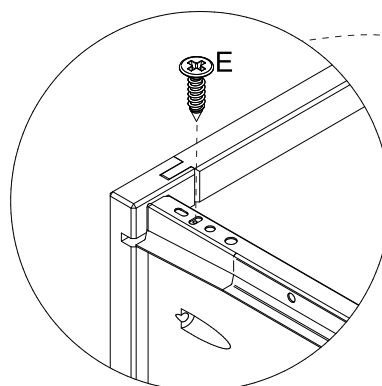

STEP 18)


18.1) ATTACH (01) HANDLE (P) TO SIDE PANEL #1, USING (02) SCREWS (L), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE .

NOTE: THIS HANDLE IS NOT FUNCTIONAL. IT'S JUST A DETAIL

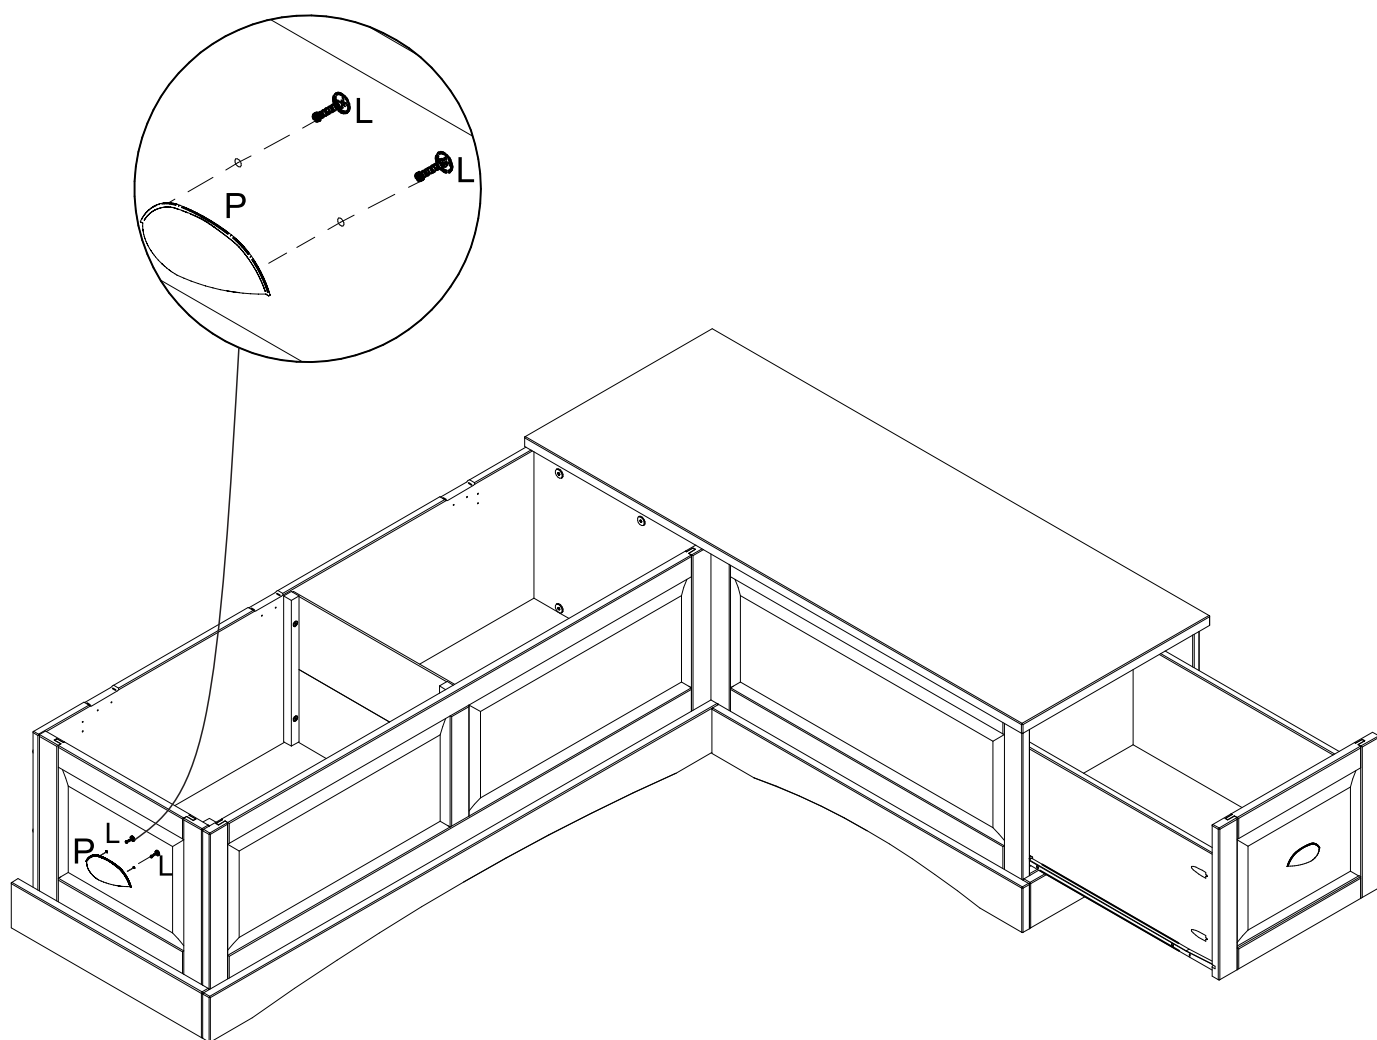


STEP 19)

19.1) FIX THE HINGES ALREADY ATTACHED TO OPEN SEAT # 8 TO STORAGE BACK PANEL # 7, USING (06) SCRWES (E) AND A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED).

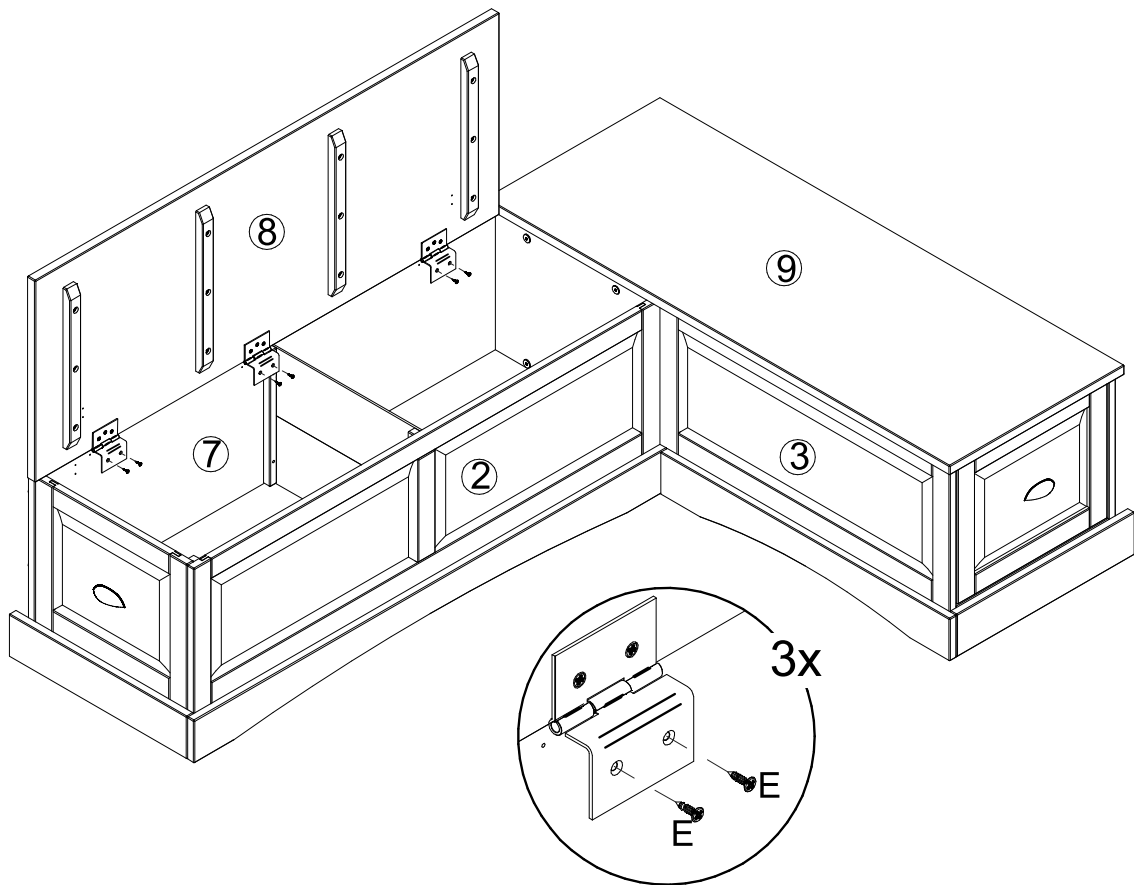

19.2) FIX (02) SAFETY HINGE (K), USING (08) SCRWES (K) AND A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED).




NOTE: CAREFULLY PAY ATTENTION ON THE PRE-DRILLED HOLES AND THE CORRECT POSITION ON THE HINGE. THIS WILL ASSURE THAT HINGE WILL PERFECTLY WORKS.

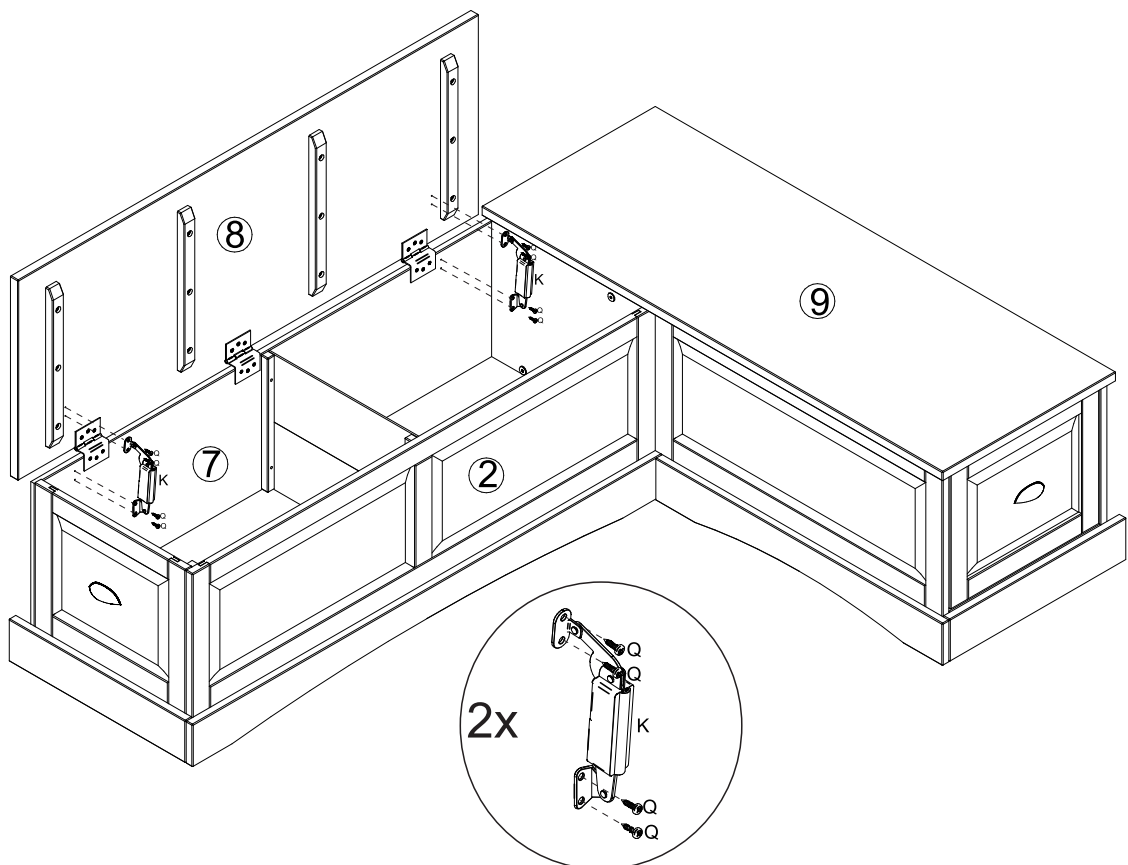

HARDWARE PACKAGE COUNT(TABLE)

OPEN HARDWARE PACKAGE ON A FLAT SURFACE COVERED WITH NEWSPAPER. COUNT EACH PIECE OF HARDWARE TO MATCH THE QUANTITY NUMBER IN THE HARDWARE IDENTIFICATION COLUMN CALL CUSTOMER SERVICE IF ANYPARTS ARE MISSING. FOLLOW THE LETTER IDENTIFICATION WHEN READING THE ASSEMBLY DRAWING "C"THROUGH "Z".

HARDWARE IDENTIFICATION

C		4,5 x 35mm	SCREW 1 3/16" LONG	08
F		7 x 70mm	SCREW 2 3/4" LONG	04
J			ALLEN WRENCH	01
R		10 x 50mm	WOOD DOWEL 2" LONG	10
S			SCREW TAP	04
T		4,5 x 50mm	SCREW 2" LONG	03
Z			ADHESIVE FELT	04

IMPORTANT:


PLEASE USEALLTHE HARDWARE MENTIONEDABOVE.
THEYWILLASSURETHE ITEM STABILITYAND SAFETY.

TOOLS REQUIRED

AN ALLEN WRENCH (J) (PROVIDED)AND A STANDARD PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) ARE REQUIRED TO ASSEMBLE THIS TABLE. USE A PLASTIC HEAD Mallet TO TAP IN WOODEN DOWELS. NOTE:A PIECE OF WOOD CAN ALSO BE USED TO KNOCK IN WOODEN DOWELS. BEFORE YOU BEGIN ASSEMBLY, SELECT AN OPEN SPACE, PREFERABLY ON A CARPET AREA. IF ASSEMBLING ON A HARD SURFACE, OR ON A WOOD FLOOR, USE BLANKET TO PREVENT SCRACHING FURNITURE AS WELLAS WOOD FLOOR.


PARTS IDENTIFICATION

- 24 - LEG (2X)
- 25 - TABLE TOP
- 26 - RAIL
- 27 - CROSSBAR

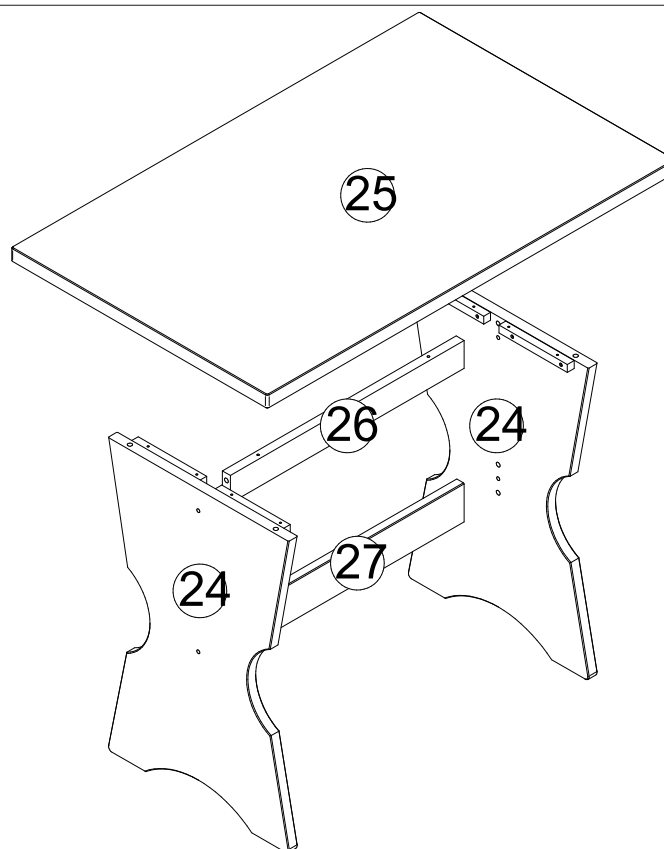


STEP1)

1.1) INSERT (10) WOODEN DOWELS (R) TO LEGS #24 (2X), RAIL # 26 AND CROSSBAR # 27, USING THE PRE DRILLED HOLES AS GUIDE.

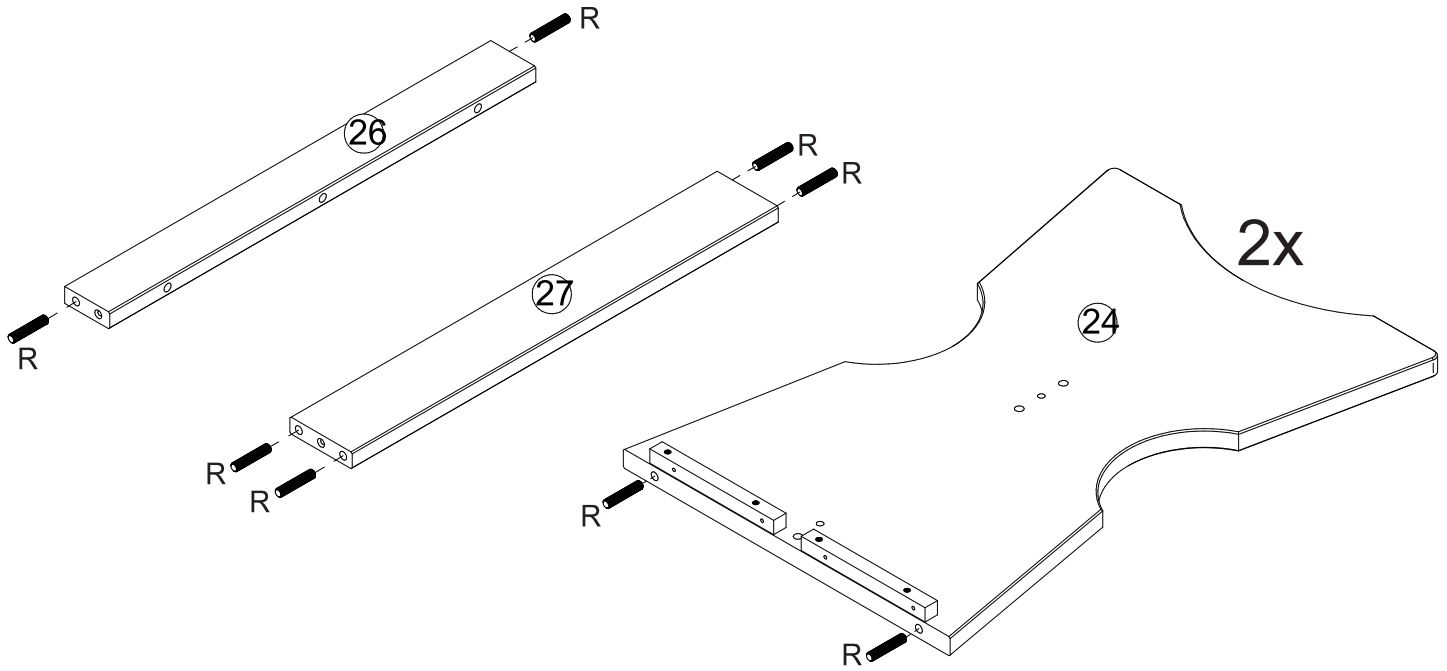**STEP2)**

2.1) TO ASSEMBLE TO BASE OF THE TABLE, FIX LEGS # 24(2X) TO RAIL # 26 AND CROSSBAR # 27, USING (04) SCREWS (F), AN ALLEN WRENCH (J) (PROVIDED), THE WOODEN DOWELS ALREADY INSERTED AND THE PRE DRILLES HOLES AS GUIDE.


2.2) USE THE SCREW CAP (S) TO COVER THE SCREW HEAD.

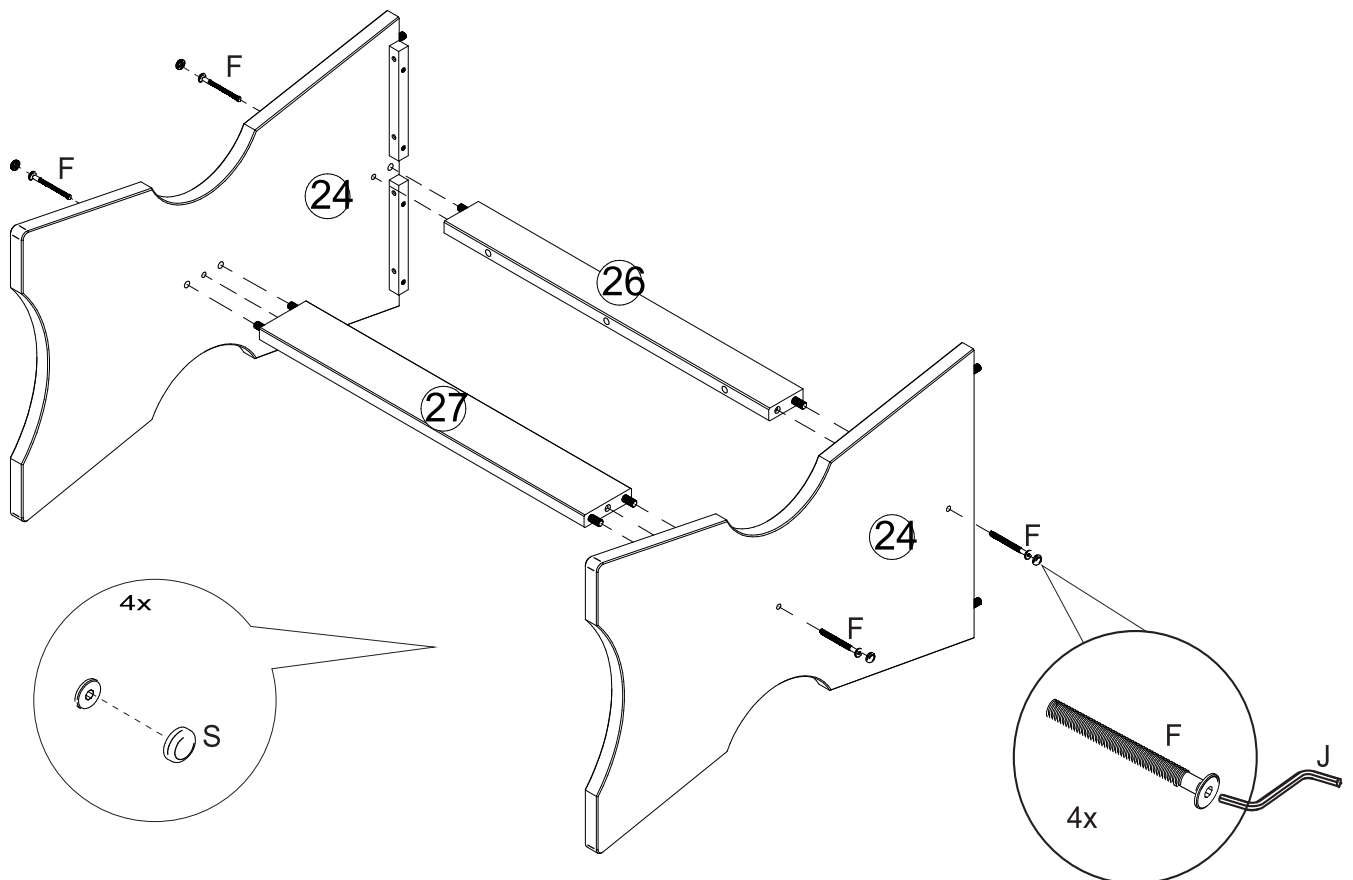

STEP3)

3.1) FIX THE BASE TO TABLE TOP # 25 USING (08) SCREWS (C), (03) SCREWS (T), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE .




3.2) TO AVOID SCRATCH THE FLOOR, PLEASE ATTACH (04) ADHESIVE FELT (Z) ON TABLE BASE, AS PER DRAWING BELOW.

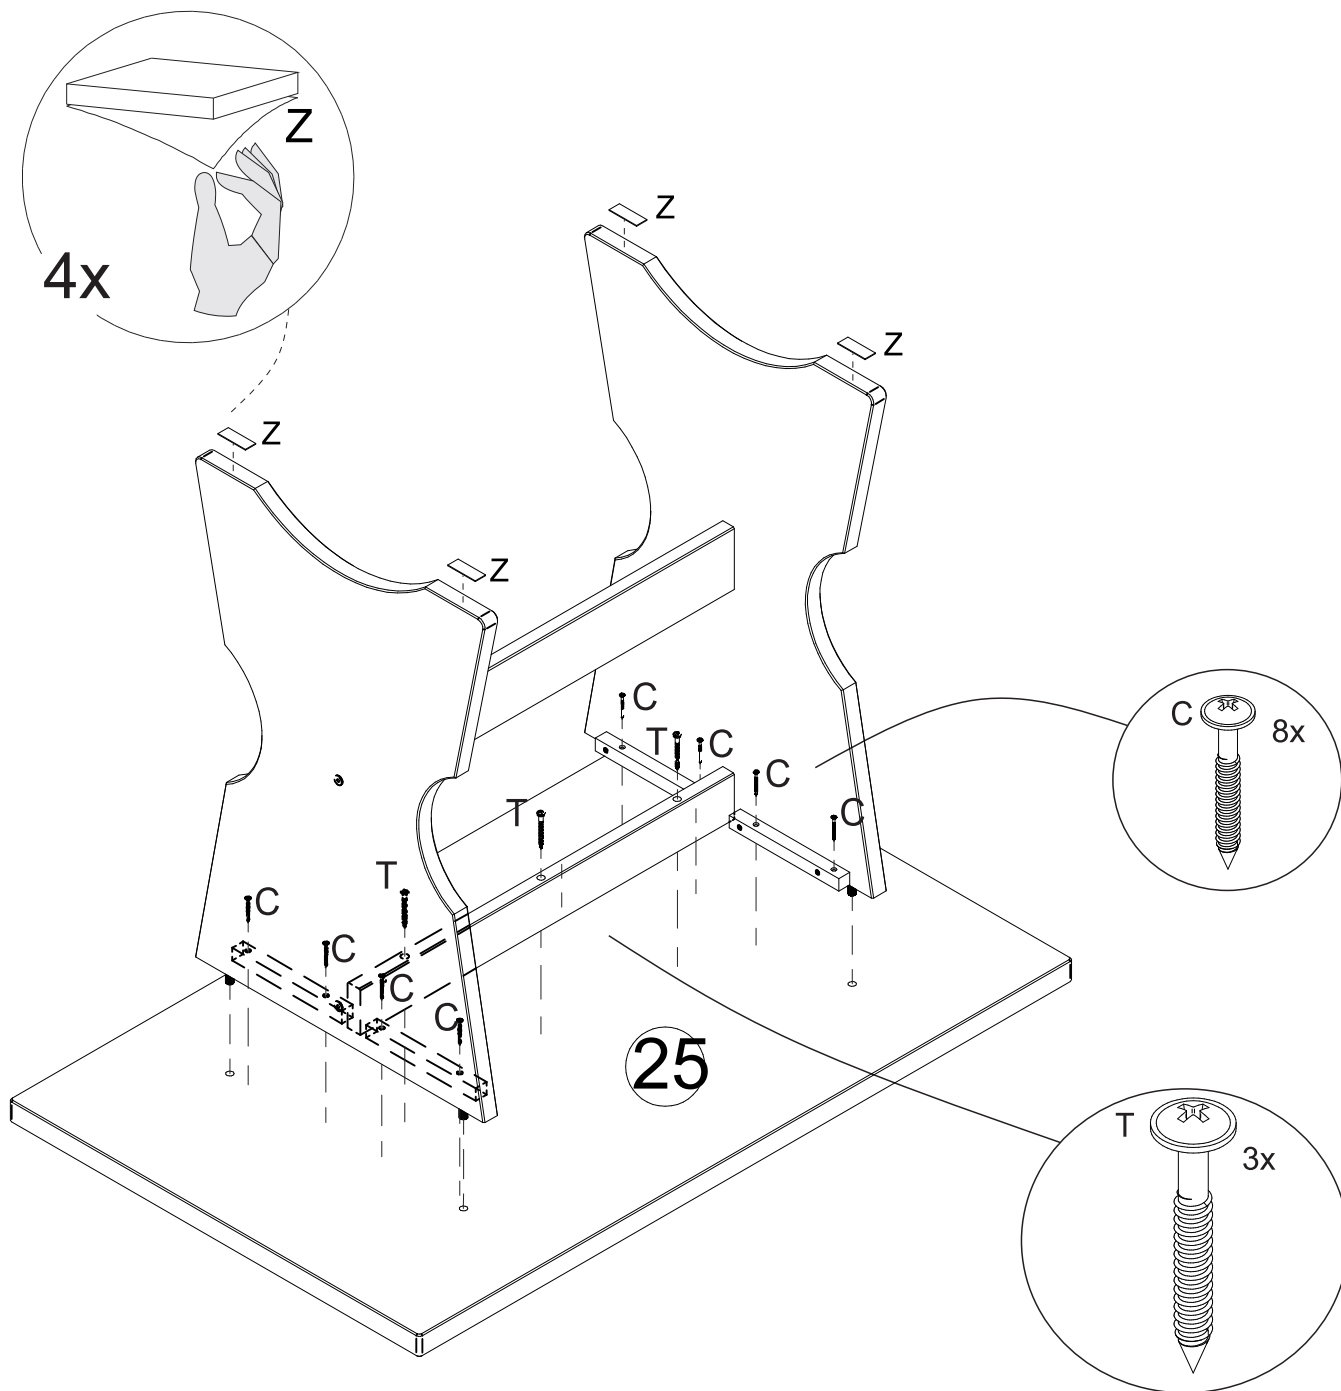

HARDWARE PACKAGE COUNT(SIMPLE BENCH)

OPEN HARDWARE PACKAGE ON A FLAT SURFACE COVERED WITH NEWSPAPER. COUNT EACH PIECE OF HARDWARE TO MATCH THE QUANTITY NUMBER IN THE HARDWARE IDENTIFICATION COLUMN. CALL CUSTOMER SERVICE IF ANY PARTS ARE MISSING. FOLLOW THE LETTER IDENTIFICATION WHEN READING THE ASSEMBLY DRAWING "C" THROUGH "Z".

HARDWARE IDENTIFICATION

C		4,5 x 35mm	SCREW 1 3/16" LONG	08
F		7 x 70mm	SCREW 2 3/4" LONG	02
J			ALLEN WRENCH	01
R		10 x 50mm	WOOD DOWEL 2" LONG	06
S			SCREW TAP	02
Z			ADHESIVE FELT	04

IMPORTANT:


PLEASE USE ALL THE HARDWARE MENTIONED ABOVE.
THEY WILL ASSURE TO THE ITEM STABILITY AND SAFETY.

TOOLS REQUIRED

AN ALLEN WRENCH (J) (PROVIDED) AND A STANDARD PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) ARE REQUIRED TO ASSEMBLE THIS TABLE. USE A PLASTIC HEAD Mallet TO TAP IN WOODEN DOWELS. NOTE: A PIECE OF WOOD CAN ALSO BE USED TO KNOCK IN WOODEN DOWELS. BEFORE YOU BEGIN ASSEMBLY, SELECT AN OPEN SPACE, PREFERABLY ON A CARPET AREA. IF ASSEMBLING ON A HARD SURFACE, OR ON A WOOD FLOOR, USE BLANKET TO PREVENT SCRATCHING FURNITURE AS WELL AS WOOD FLOOR.

PARTS IDENTIFICATION

- 28 - LEGS (X2)
- 29 - SEAT
- 30 - CROSSBAR
- 31 - CLEAT (2x)

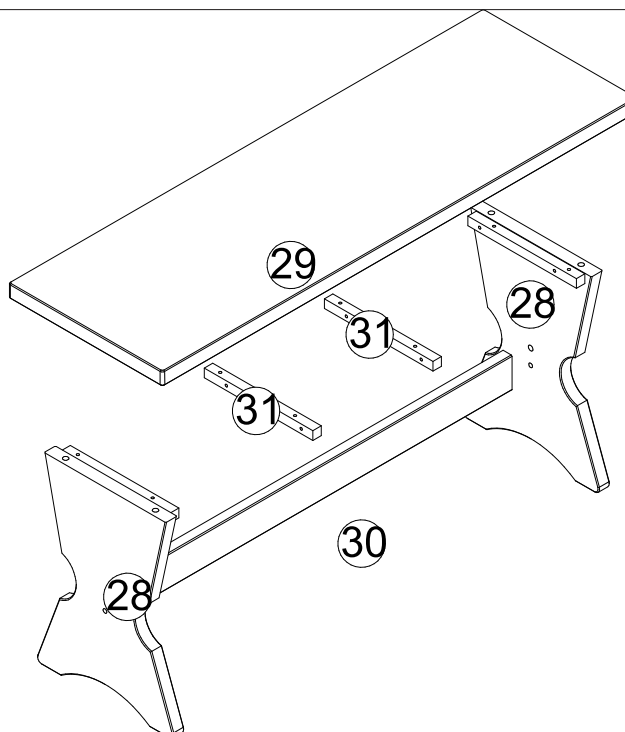


This exploded perspective view shows the assembly of the components. The base plate 28 is shown with two of its side rails 30 being attached. The side rails 30 are shown with their respective fasteners R. The top plate 26 is shown being placed onto the base plate 28, with its fasteners R aligned with the holes in the base plate 28. The label '2x' indicates that there are two of the side rails 30.

[illegible]


STEP3)

3.1) FIX THE BENCH BASE TO THE SEAT # 29 USING (04) SCREWS (C), A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND THE PRE-DRILLED HOLES AS GUIDE .

3.2) TO AVOID SCRATCH THE FLOOR, PLEASE ATTACH (04) ADHESIVE FELT (Z) ON BENCH BASE, AS PER DRAWING BELOW.

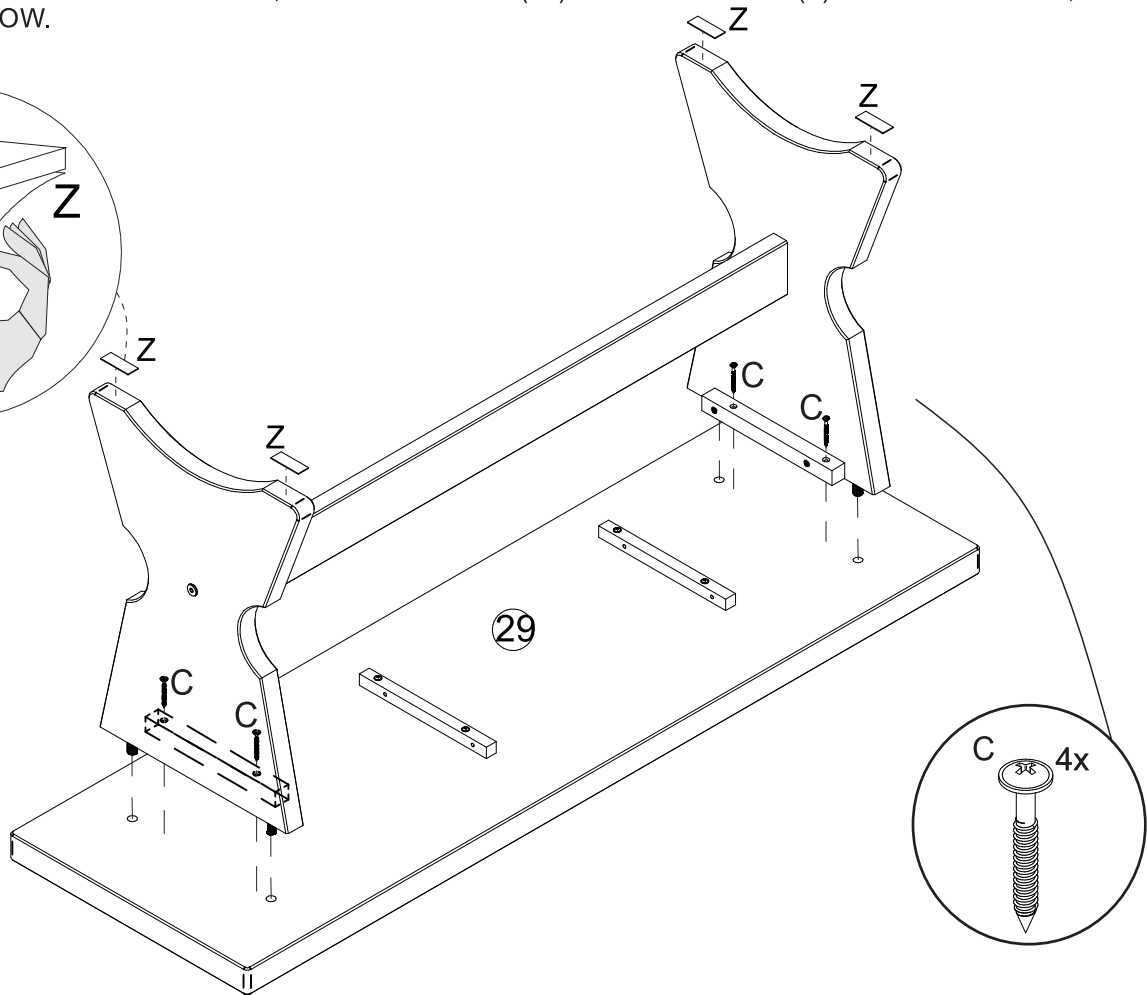**STEP4)**

4.1) USE THE SCREW CAP (S) TO COVER THE SCREW HEAD.

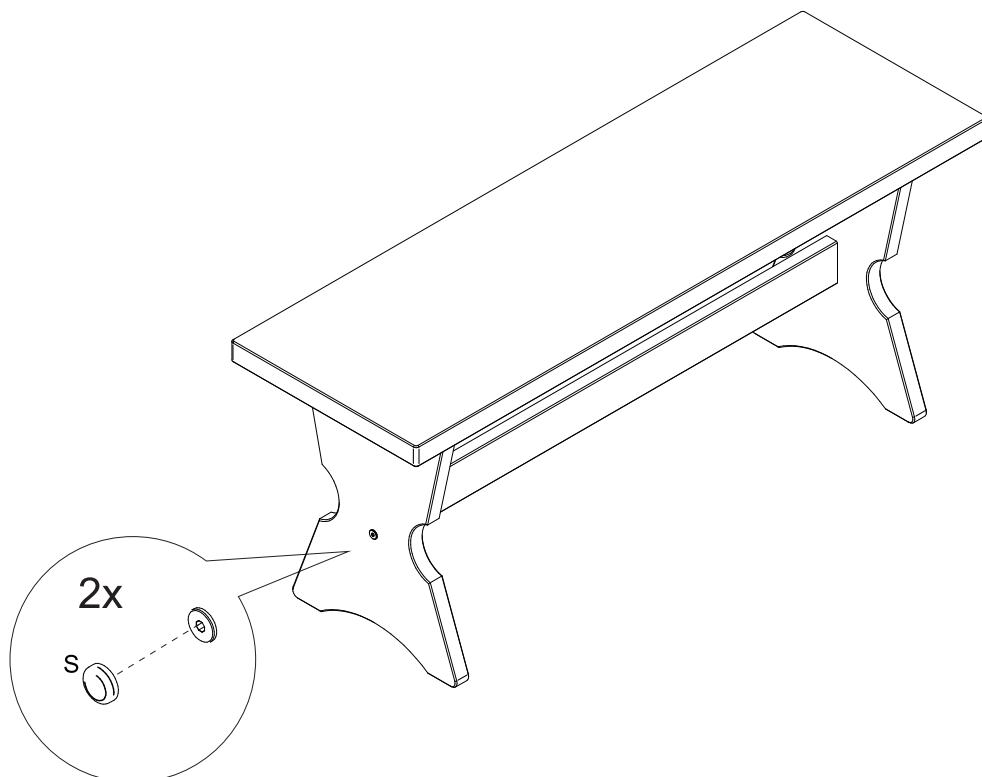

LIMITED 6 MONTHS WARRANTY

GARANTIE LIMITÉE DE 6 MOIS

GARANTÍA LIMITADA DE 6 MESES

WHAT IS COVERED

This product is covered under our manufacturer's 6 months limited warranty (Linon Home Décor Products). To ensure your complete satisfaction, this warrants to the original purchaser that the Linon supplied item is free from defects in material and workmanship, as of the date of purchase, and that it will, under normal use and proper care, remain so for six months after the date of purchase.

Replacement of missing or initially defective parts will be sent, at no charge, for a period of 30 days from the date of purchase with valid proof of purchase providing the parts are available in our warehouse and the item purchased is part of our current inventory.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from the customer service center. Labor and material charges to remove or replace parts under this warranty are not covered.

This warranty does not cover: Furniture used for commercial purposes, failures caused by improper installation assembly or by improper care, unreasonable or abusive use, freeze damage, acts of God, rust, purchased parts or return freight and packaging charges. Proof of purchase (dated register receipt) is required for warranty claims.

HOW TO OBTAIN SERVICE

For further information, please contact our customer service department, c/o Linon Home Décor Products, Inc., between 9:00 AM and 5:00 PM Eastern Standard Time, Monday through Friday:

CUSTOMER SERVICE DEPARTMENT:

- 1) Email address:
consumersupport@linon.com
- 2) Toll free number:
1 - 800 - 262 - 1852

CARE INSTRUCTIONS

- Care and cleaning should be done with a soft cloth and water.
- Do not use abrasive products and steel wool
- Do not expose the furniture to bad weather or excessive heat.

QU'EST-CE QUI EST COUVERT

Ce produit est couvert sous une garantie limitée de 6 mois offerte par le fabricant. Afin d'assurer votre entière satisfaction, cela garantit à l'acheteur original que le produit fourni est exempt de défauts de matériaux et de fabrication à compter de la date d'achat, et ce, sous des conditions d'utilisation normales et de soins adéquats, valide pendant six mois après la date d'achat.

Le remplacement de pièces manquantes ou défectueuses dès le départ sera envoyé, sans frais, pour une période de 30 jours suivant la date d'achat avec une preuve d'achat valide pourvu que les pièces soient disponibles dans notre entrepôt et que l'article acheté fait partie de notre inventaire actuel.

QU'EST-CE QUI N'EST PAS COUVERT

Il y a de la responsabilité du client de couvrir les frais de transport et d'emballage vers et à partir du centre de service après-vente. Les frais de la main-d'œuvre et des matériaux pour retirer les pièces ou les remplacer sous cette garantie ne sont pas couverts.

Cette garantie ne couvre pas : les meubles utilisés à des fins commerciales, les défaillances causées par un mauvais assemblage ou entretien (sans dépasser les limites de poids), l'utilisation déraisonnable ou abusive, les dommages causés par le gel, la rouille, les frais de transport et d'emballage pour des pièces achetées ou retournées. Une preuve d'achat (reçu de caisse daté) est requise pour les réclamations sous garantie.

COMMENT FAIRE POUR OBTENIR DU SERVICE

Pour de plus amples renseignements, veuillez communiquer avec notre département du service à la clientèle, entre 9 h et 17 h HNE, du lundi au vendredi.

CENTRE DE SERVICE À LA CLIENTÈLE

- 1) Adresse de courriel :
consumersupport@linon.com
- 2) Numéro de téléphone sans frais:
1 - 800 - 262 - 1852

SOINS

- Les soins et le nettoyage doivent être faits avec un chiffon doux et de l'eau.
- Ne pas utiliser de produits abrasifs et de laine d'acier.
- Ne pas exposer les meubles aux intempéries ou à la chaleur excessive.

QUÉ ESTÁ CUBIERTO

Este producto está cubierto por la garantía limitada de 6 meses de nuestro fabricante. Para asegurar su total satisfacción, ésta garantiza al comprador original que el artículo proporcionado se encuentra libre de defectos materiales y de fabricación, a partir de la fecha de compra, y que permanecerá en tal estado, sometido a un uso normal y cuidados adecuados, durante los seis meses posteriores a la fecha de la compra.

Las partes faltantes o que presenten defectos al inicio de ese período de tiempo serán enviadas sin cargo, durante un lapso de 30 días a partir de la fecha de compra, mediante la presentación de un comprobante de compra válido, siempre que las partes estén disponibles en nuestro almacén y el artículo adquirido sea parte de nuestro inventario actual.

QUÉ NO ESTÁ CUBIERTO

El cliente asumirá los costos de flete y empaque hacia y desde el centro de servicio de cliente. Los cargos de material y mano de obra para extraer o reemplazar partes en el marco de la garantía no están cubiertos.

Esta garantía no cubre: muebles utilizados con fines comerciales, fallas causadas por montaje de instalación inadecuados o uso indebido (se recomienda no exceder los límites de peso), uso no razonable o abusivo, daños por congelación, oxidación, partes compradas, flete de devolución y cargos de empaque. Se exigirá el comprobante de compra (la factura de registro con fecha) para hacer valer la garantía.

CÓMO OBTENER SERVICIO

Si desea más información, póngase en contacto con nuestro departamento de servicio al cliente, de lunes a viernes entre las 9:00 a.m. y las 5:00 p.m., hora estándar de los Estados Unidos.

DEPARTAMENTO DE SERVICIO AL CLIENTE

- 1) Correo electrónico:
consumersupport@linon.com
- 2) Número telefónico gratuito:
1 - 800 - 262 - 1852

CUIDADOS

- La conservación y limpieza debe ser hecha con un trapo levemente humedecido en agua.
- No use productos abrasivos y esponja de acero.
- No exponer el mueble a intemperies ni al calor excesivo.

#903801WALAB

MADE IN BRAZIL
FABRIQUÉ AU BRÉSIL
HECHO EN BRASIL