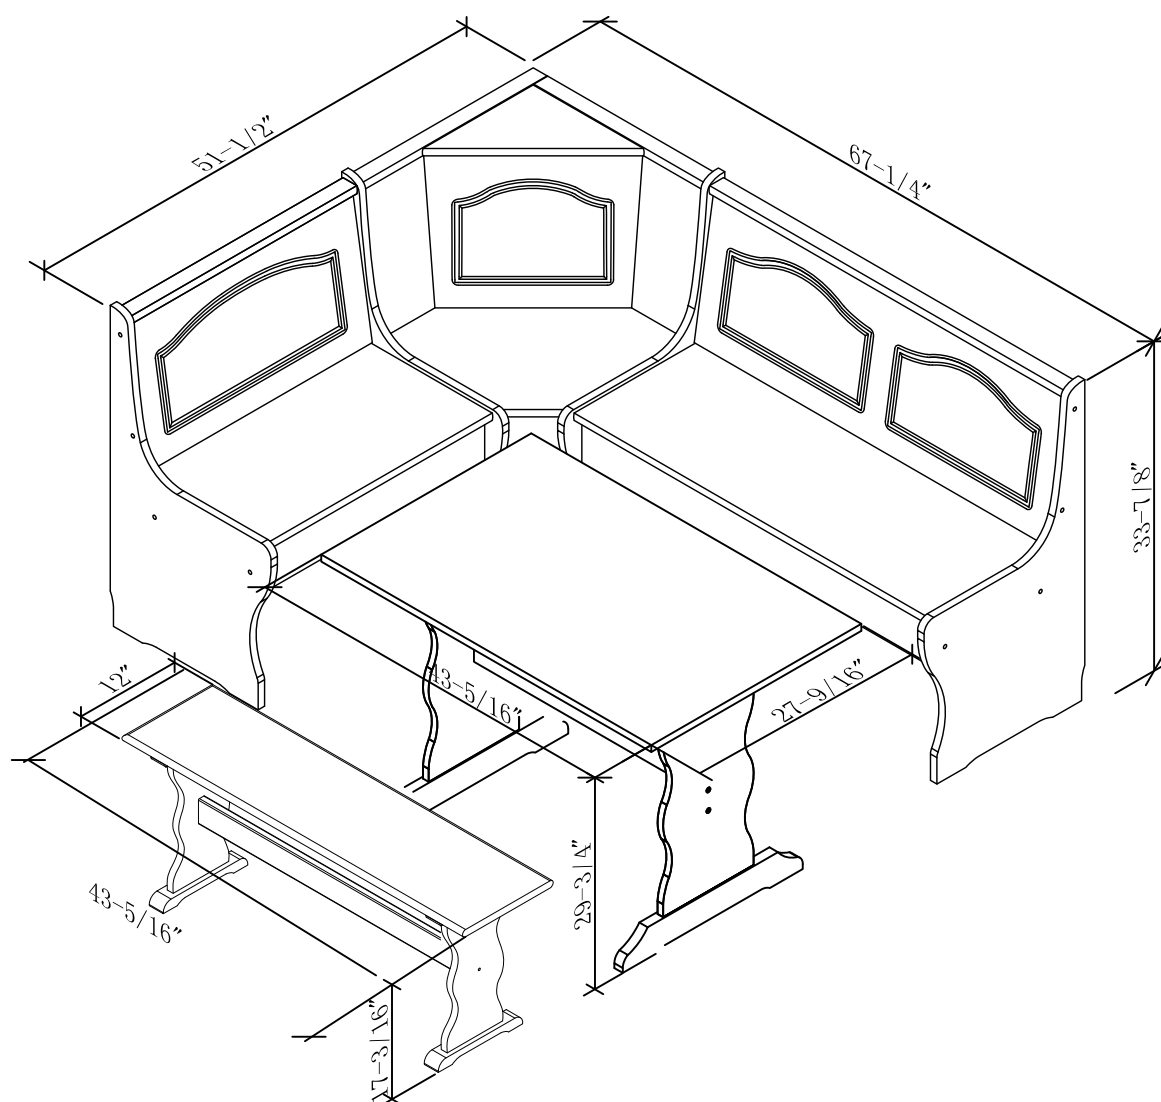




LINON HOME DECOR PRODUCTS, INC.

ASSEMBLY INSTRUCTION

CHELSEA NOOK TABLE
MODEL# 90368WAL-01-KD-U
Sears# 14022 box 3 of 3



MADE IN CHINA
FOR LINON HOME DECOR PRODUCTS INC BY CH46








LINON HOME DECOR PRODUCTS, INC.

HARDWARE PACKAGE COUNT (TABLE)

OPEN HARDWARE PACKAGE ON A FLAT SURFACE COVERED WITH NEWSPAPER. COUNT EACH PIECE OF HARDWARE TO MATCH THE QUANTITY NUMBER IN THE HARDWARE IDENTIFICATION COLUMN. FOLLOW THE NUMBER IDENTIFICATION WHEN READING THE ASSEMBLY DRAWING ④ THROUGH ⑩

HARDWARE IDENTIFICATION

④		SCREW 1"LONG (FULL SIZE) 5X25mm	8
⑤		SCREW 2"LONG (FULL SIZE) 5X50mm	8
⑥		WOOD HOLE COVER (FULL SIZE)	4
⑦		WOOD DOWEL 2"LONG (FULL SIZE) 10X50mm	10
⑧		SCREW 1-3/4"LONG (FULL SIZE) 6X45mm	4
⑨		NUT (NOT TO SCALE)	4
⑩		ALLEN WRENCH (NOT TO SCALE)	1

TOOLS REQUIRED FOR ASSEMBLY: PHILLIPS SCREWDRIVER (NOT PROVIDED)

PARTS IDENTIFICATION

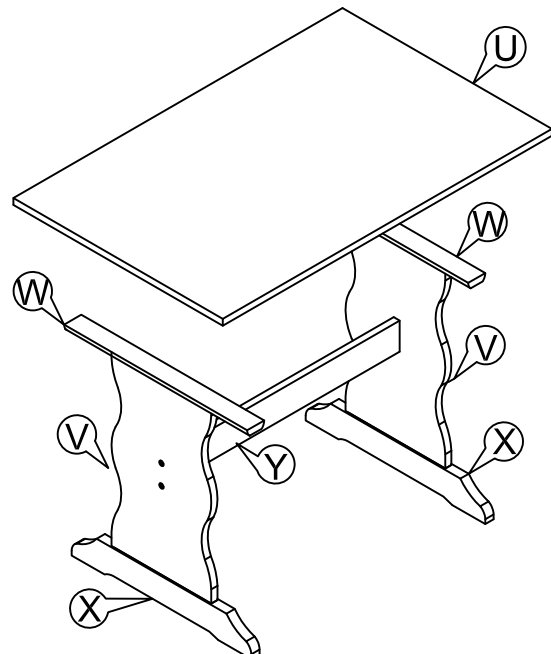
U- TABLE TOP

V- LEGS(X2)

W- TABLE TOP SUPPORT(X2)

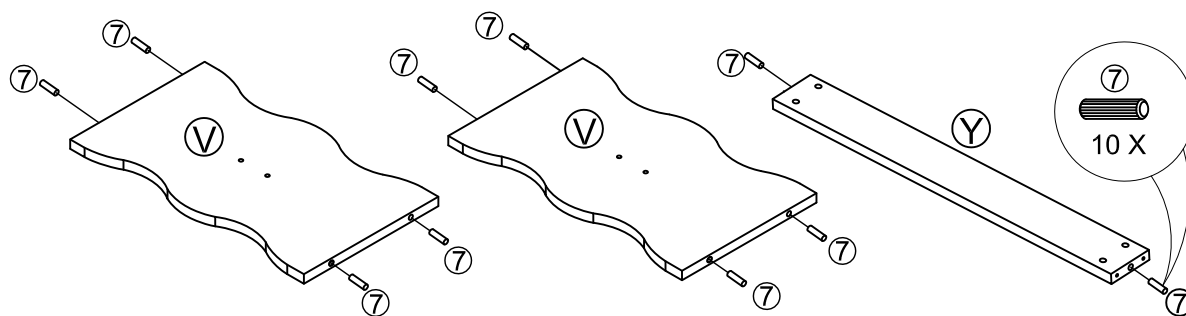
X- LEGS BASE(X2)

Y- CROSSBAR

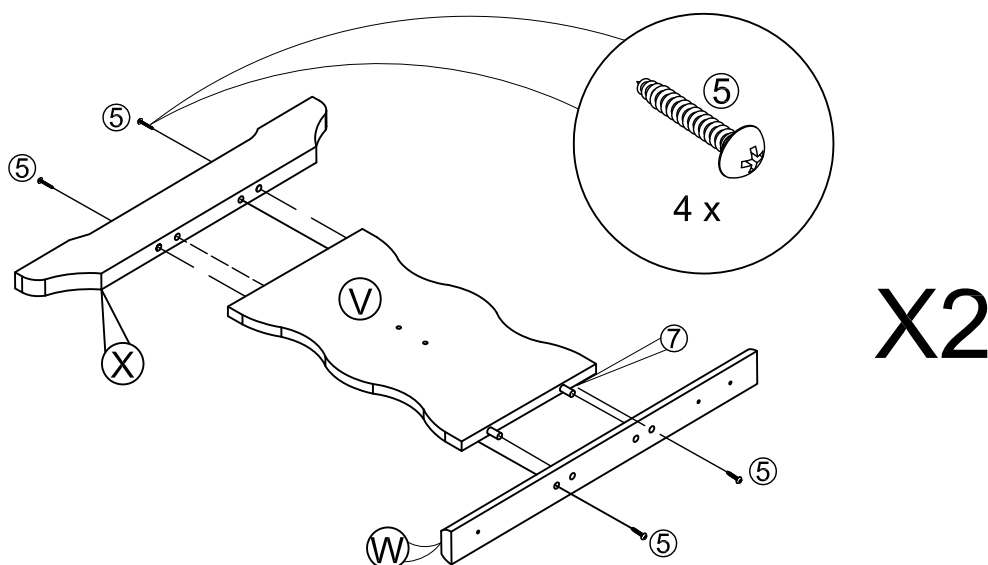


**LINON HOME DECOR PRODUCTS, INC.****STEP 1)**

- 1.1 INSERT (10) WOOD DOWELS ⑦ INTO HOLES LOCATED AT BOTH ENDS OF LEGS #V AND CROSSBAR #Y, AS SHOWN IN FIGURE 1.

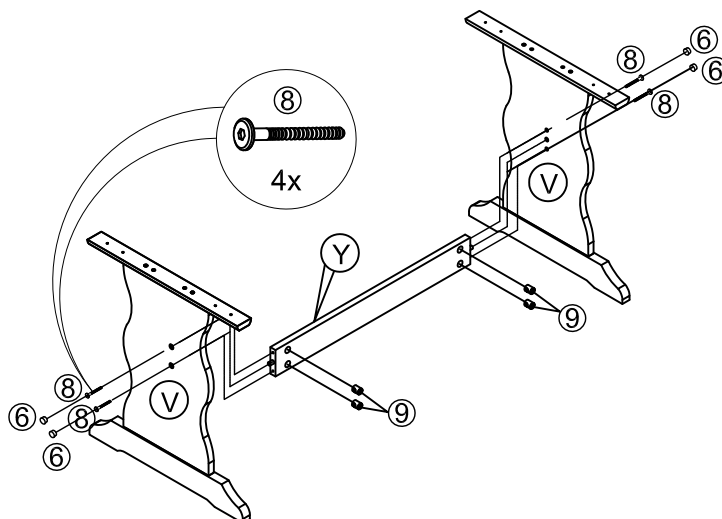
**FIGURE 1****STEP 2)**

- 2.1 ATTACH LEG BASE #X TO LEG #V THROUGH FITTING DOWELS LOCATED ON LOWER END OF LEG #V INTO HOLES LOCATED ON UPPER EDGE OF BASE #X AS GUIDE, SECURE CONNECTION WITH (02) SCREWS ⑤ DRIVEN WITH PHILLIPS HEAD SCREW DRIVER (NOT ATTACHED). AS SHOWN IN FIGURE 2. REPEAT PROCEDURE FOR SECOND LEG #V.
- 2.2 ATTACH TABLE TOP SUPPORT #W TO LEG #V FITTING THE DOWELS LOCATED ON UPPER END OF LEG #V INTO HOLES LOCATED ON SUPPORT #W. USING PRE-DRILLED HOLES AS GUIDE, SECURE CONNECTION WITH (02) SCREWS ⑤ DRIVEN WITH PHILLIPS HEAD SCREW DRIVER (NOT ATTACHED). AS SHOWN IN FIGURE 2. REPEAT PROCEDURE FOR SECOND TOP SUPPORT #W.

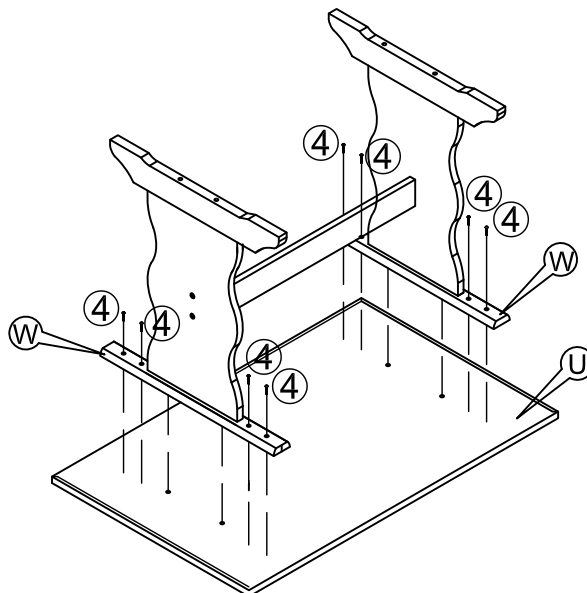
**FIGURE 2**

**LINON HOME DECOR PRODUCTS, INC.****STEP 3)**

- 3.1 ATTACH CROSSBAR #Y TO LEGS #V INSERTING WOOD DOWELS LOCATED AT ENDS OF CROSSBAR INTO HOLES LOCATED ON LEGS. SECURE CONNECTION USING (04) SCREWS⑧AND (04) NUTS⑨. AS SHOWN IN FIGURE 3.
- 3.2 INSERT (04) WOOD HOLE COVERS⑥INTO HOLES LOCATED AT LEGS #V AS SHOWN IN FIGURE 3.

**FIGURE 3****STEP 4)**

- 4.1 ATTACH ASSEMBLED LEGS TO TABLE TOP #U THROUGH FITTING WOOD DOWELS PRESENT IN UPPER SIDE OF TOP SUPPORTS #W INTO HOLES LOCATED UNDERNEATH OF TABLE TOP #U AS SHOWN IN FIGURE 4. IT SERVES AS GUIDE ENABLING YOU TO CONNECT THE LEGS IN CORRECT POSITION.
- 4.2 USING PRE-DRILLED HOLES AS GUIDE, SECURE CONNECTION WITH (08) SCREWS④DRIVEN WITH SCREW DRIVER AS SHOWN IN FIGURE 4.
- 4.3 USING HELP, GENTLY FLIP TABLE WITH BOTH LEGS ON FLOOR AS SHOWN ON PAGE 1. HOLD ON PHILLIPS HEAD SCREW DRIVER (NOT ATTACHED) AND PERIODICALLY CHECK ALL CONNECTIONS FOR TIGHTNESS.

**FIGURE 4**